



Component code	Description	With reference to the assembly
<a href="#">A001</a>	BATTERY	<a href="#">Op. 5530B BATTERY AND LEADS</a>
<a href="#">A005</a>	Contact board	<a href="#">Op. 5530B BATTERY AND LEADS</a>
<a href="#">A010</a>	ALTERNATOR	<a href="#">Op. 5530A ALTERNATOR AND COMPONENTS</a>
<a href="#">A020</a>	STARTER MOTOR	<a href="#">Op. 5520B STARTER MOTOR AND COMPONENTS</a>
<a href="#">B001</a>	JUNCTION UNIT	<a href="#">Op. 5505A MULTI-FUNCTION COMPONENTS</a>
<a href="#">B002</a>	JUNCTION UNIT UNDER DASHBOARD	<a href="#">Op. 5505A MULTI-FUNCTION COMPONENTS</a>
<a href="#">B099</a>	MAXI FUSE BOX ON BATTERY	<a href="#">Op. 5530B BATTERY AND LEADS</a>
<a href="#">C002</a>	BATTERY EARTH ON ENGINE	-
<a href="#">C003</a>	BATTERY EARTH ON BODY SHELL	-
<a href="#">C022</a>	Centre dashboard earth	-
<a href="#">D004</a>	FRONT/ENGINE COUPLING	-
<a href="#">E050</a>	INSTRUMENT PANEL	<a href="#">Op. 5560B ANALOGUE CONTROL PANEL</a>
<a href="#">H001</a>	IGNITION SWITCH	<a href="#">Op. 5520A IGNITION SWITCH</a>
<a href="#">M001</a>	BODY COMPUTER	<a href="#">Op. 5505A MULTI-FUNCTION COMPONENTS</a>