


eLearn - Contents

NUOVA BRAVO 1.9 JTD 8v ENGINE MANAGEMENT ECU (FRONT) M010A

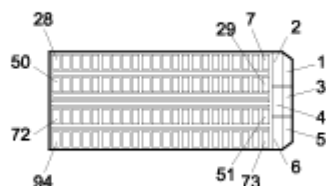

Wiring	Colour
See 12 FRONT	NERO

Pin	Cable		Destinatio n		
	Sec..	Colour	Node	Connect.	Pin
1	1	LN		See B001C JUNCTION UNIT (FRONT)	31
2	2.5	N	X	See M010A ENGINE MANAGEMENT ECU (FRONT)	6
				See M010A ENGINE MANAGEMENT ECU (FRONT)	4
				See M015C PLUG PREHEATING CONTROL UNIT (FRONT)	1
				See C001B BATTERY EARTH (FRONT)	-
4	2.5	N	X	See M010A ENGINE MANAGEMENT ECU (FRONT)	6
				See M010A ENGINE MANAGEMENT ECU (FRONT)	2
				See M015C PLUG PREHEATING CONTROL UNIT (FRONT)	1
				See C001B BATTERY EARTH (FRONT)	-

5	2.5	LR		See B001C JUNCTION UNIT (FRONT)	18
6	2.5	N	X	See M010A ENGINE MANAGEMENT ECU (FRONT)	4
				See M010A ENGINE MANAGEMENT ECU (FRONT)	2
				See M015C PLUG PREHEATING CONTROL UNIT (FRONT)	1
				See C001B BATTERY EARTH (FRONT)	-
8		NZ		See K055 ACCELERATOR PEDAL POTENTIOMETER	5
9		HV		See K055 ACCELERATOR PEDAL POTENTIOMETER	4
10		NH		See K101 FUEL TEMPERATURE AND WATER IN FUEL FILTER SENSOR	2
11		ZH		See K101 FUEL TEMPERATURE AND WATER IN FUEL FILTER SENSOR	1
12		NR		See K120 LINEAR SENSOR FOR FANS	1
13		HM		See K120 LINEAR SENSOR FOR FANS	3
17		VB		See B002A JUNCTION UNIT UNDER DASHBOARD (FRONT)	16
20		BV		See B001C JUNCTION UNIT (FRONT)	11
22		LH		See K120 LINEAR SENSOR FOR FANS	2
25		BR	X	See M001A BODY COMPUTER (FRONT)	26
				See D001 FRONT/DASHBOARD COUPLING	10
				See D004 FRONT/ENGINE COUPLING	C7
25		BR		See M001A BODY COMPUTER (FRONT)	26
28		CN		See B001C JUNCTION UNIT (FRONT)	9
29		GL		See B001C JUNCTION UNIT (FRONT)	5

30		NV		See K055 ACCELERATOR PEDAL POTENTIOMETER	3
31		HR		See K055 ACCELERATOR PEDAL POTENTIOMETER	6
38		MH		See H007 CRUISE CONTROL SYSTEM CONTROL	1
45		LG		See K055 ACCELERATOR PEDAL POTENTIOMETER	2
46		LR		See K055 ACCELERATOR PEDAL POTENTIOMETER	1
51	1	MG		See K040 LAMBDA SENSOR	3
52		BH		See M015C PLUG PREHEATING CONTROL UNIT (FRONT)	5
54		ZR		See D008A AIR CONDITIONING-HEATER FRONT COUPLING (FRONT)	5
56		BC		See H007 CRUISE CONTROL SYSTEM CONTROL	6
64		MV		See K040 LAMBDA SENSOR	6
65		HG		See K040 LAMBDA SENSOR	1
69		GV		See B001C JUNCTION UNIT (FRONT)	21
71		ZB		See D001 FRONT/DASHBOARD COUPLING	4
72		BN		See B001C JUNCTION UNIT (FRONT)	12
74		BZ		See K101 FUEL TEMPERATURE AND WATER IN FUEL FILTER SENSOR	5
77		MB		See H007 CRUISE CONTROL SYSTEM CONTROL	4
78		BG		See H007 CRUISE CONTROL SYSTEM CONTROL	5
79		MN		See I031 CLUTCH PEDAL SWITCH	4
80		VN		See I030 BRAKE PEDAL SWITCH	1
83		M		See M050 ABS CONTROL UNIT	14
84		V		See M050 ABS CONTROL UNIT	25

86		BL		See K040 LAMBDA SENSOR	2
87		MC		See K040 LAMBDA SENSOR	5
90		GN		See B001C JUNCTION UNIT (FRONT)	28
93		BM		See M015C PLUG PREHEATING CONTROL UNIT (FRONT)	2

