

Refitting ( [Removing](#) )

Fit the flywheel to the crankshaft housing.

Screw in the fixing bolts and then tighten them to torque.

	Value daNm	Fastening	Component	Ø
.	(engine crankshaft side) 2.7 -3.3 + 90°	Bolt	FLYWHEEL (MECH.)	M12

Remove the flywheel lock.