


Removing ( [Refitting](#) )

See in Op. 1048B14

See in Op. 1048B22

See in Op. 1060F20

1. Undo the fixing bolts (1a) and move the power assisted steering fluid reservoir and mounting bracket (1a) away from the work area.

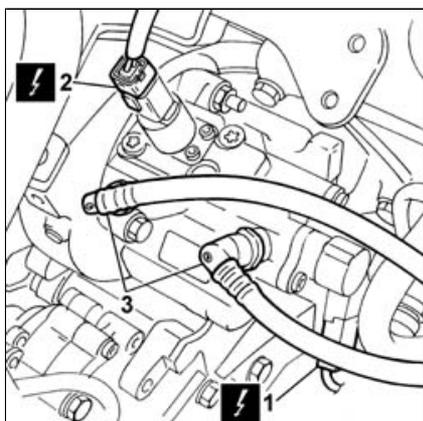


1. Disconnect the electrical connection for the fuel pressure regulator.

	Description	Connector
1	Fuel pressure regulator	N077
	Description	Connector
2	Injection pump third piston deactivation solenoid valve	L005

2. Disconnect the electrical connection for the pressure pump third piston deactivating solenoid valve.

3. Disconnect the rapid connectors for the fuel pipes.

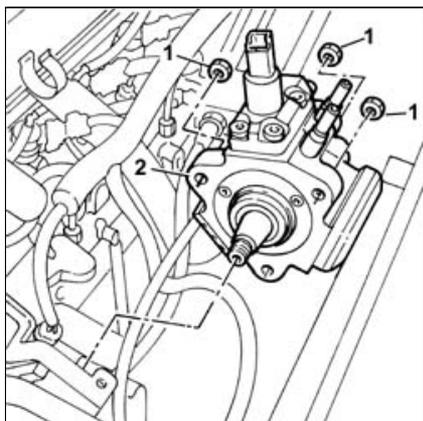

1. Undo the fixing nuts.

2. Remove the pressure pump from the housing on the support.

Refitting ( [Removing](#) )

- Position the pressure pump on the support.
- Tighten the nuts fixing the pressure pump to the mounting to torque.

	Value - daNm	Fastening	Component	Ø
.	2.5	Nut	PRESSURE PUMP	M8

- Connect the fuel pipes to the pump.

	Description	Connector
.	Fuel pressure regulator	N077

- Connect the electrical connection for the fuel pressure regulator.

- Connect the electrical connection for the pressure pump third piston deactivating solenoid valve.

	Description	Connector
.	Injection pump third piston deactivation solenoid valve	L005

- Fit the power assisted steering fluid reservoir in place and tighten the fastenings.