

REMOVING - REFITTING : AUTOMATIC AIR CONDITIONING CONTROL PANEL

ESSENTIAL : Observe the safety and cleanliness recommendations ⓘ .

1. Tooling

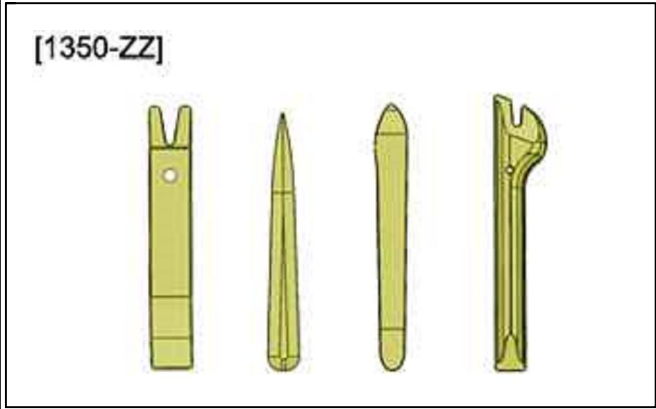
Tools	Reference	Designation
 <p>[1350-ZZ]</p>	[1350-ZZ]	Stripping tools

Figure : E5AG02MT

2. Removing

Disconnect the battery ⓘ .

Remove :

- The upper storage tray by the audio system (according to equipment)
- **The audio system** ⓘ
- **The hands-free kit** ⓘ (according to equipment)
- **The dashboard vents** ⓘ

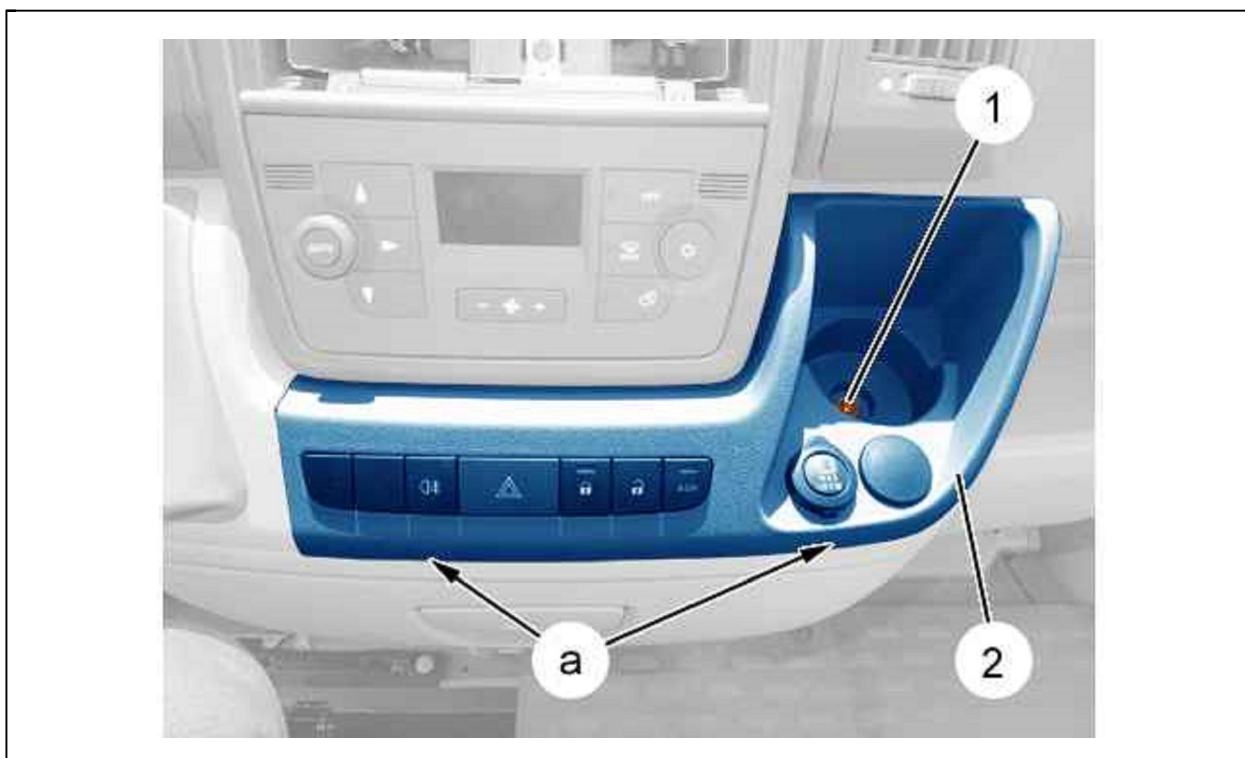


Figure : C5FG1GPD

Remove the bolt (1).

Unclip the trim (2) (at "a") ; Using tool [1350-ZZ].

Release the trim (2).

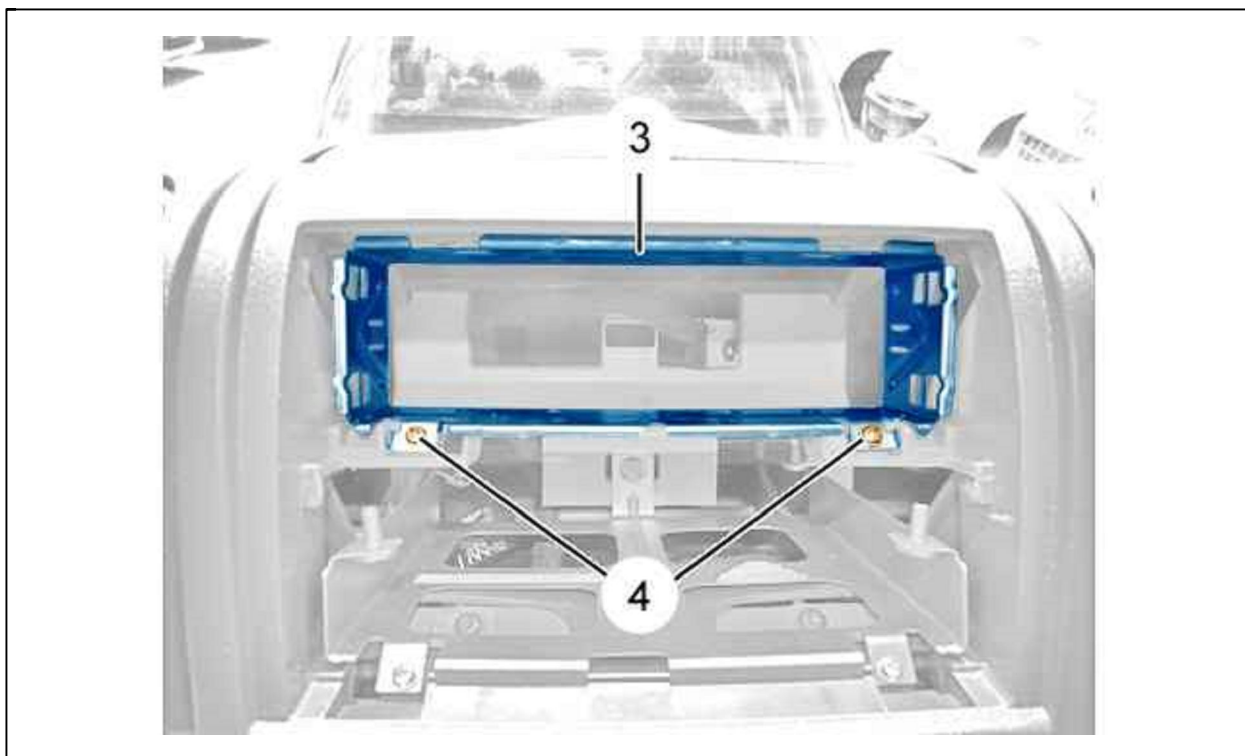


Figure : C5FG1GQD

Remove the bolts (4).

Detach then remove : The audio system bracket (3).

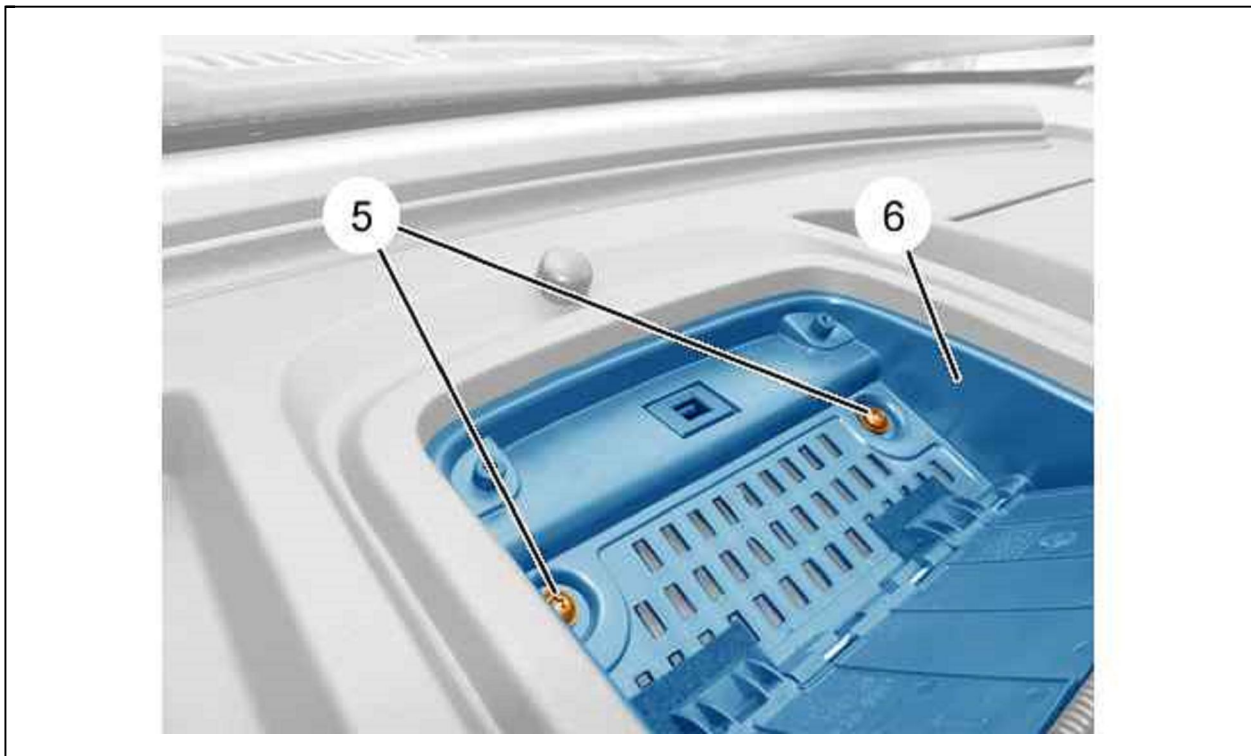


Figure : C5FG1GRD

Open : The movable shelf (6).
Remove the bolts (5).

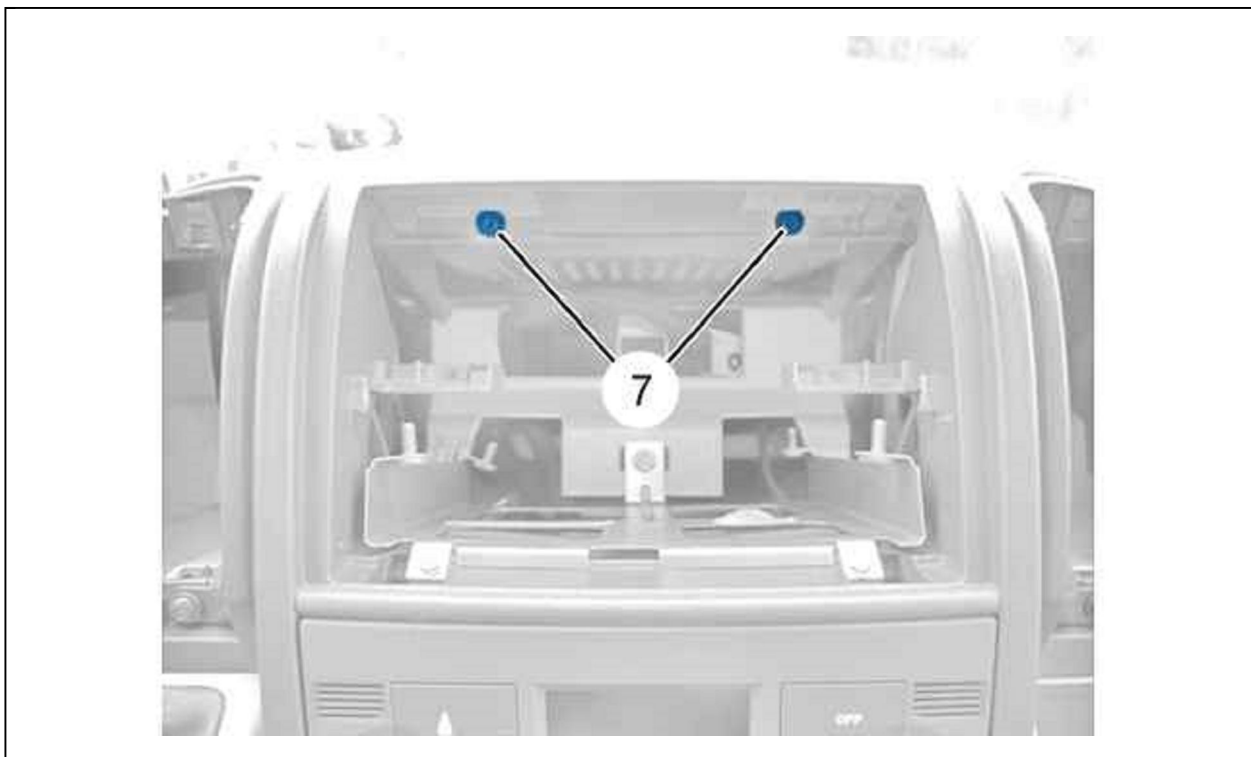


Figure : C5FG1GSD

Remove :

- The bolts (7)
- The movable shelf (6)

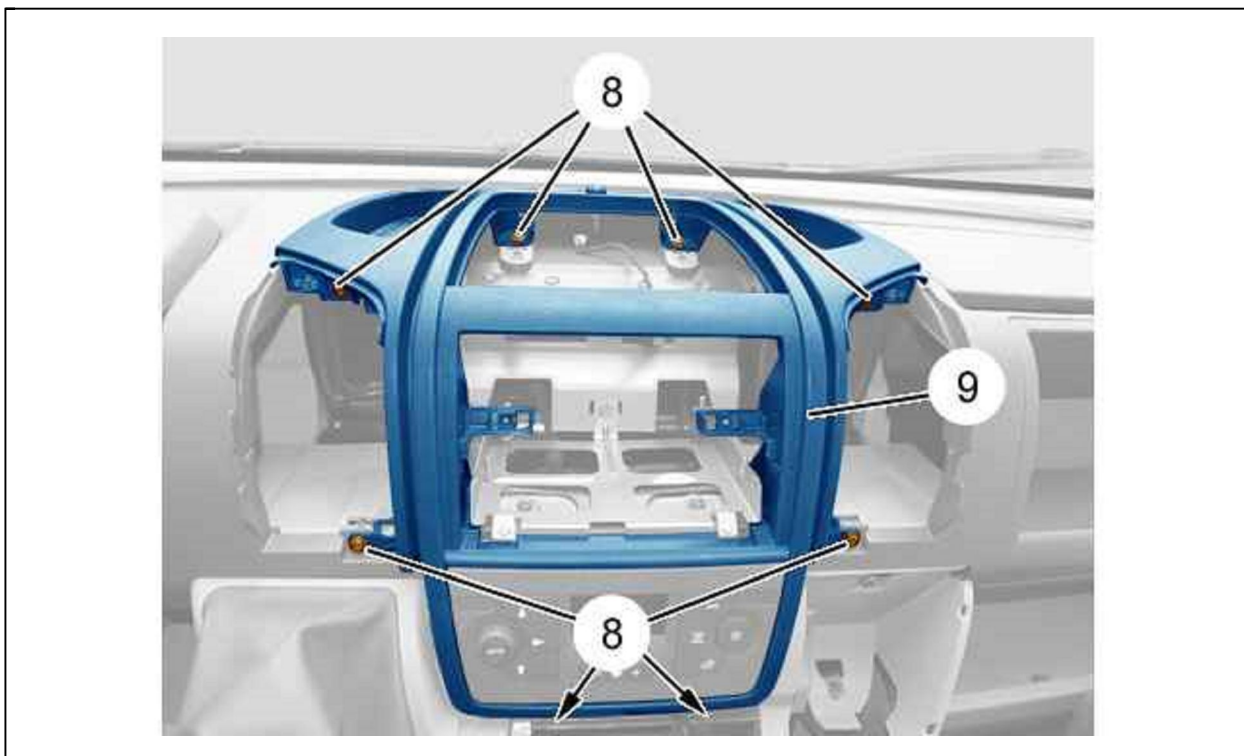


Figure : C5FG1GTD

Remove the bolts (8).

Unclip the trim (9) ; Using tool [1350-ZZ].

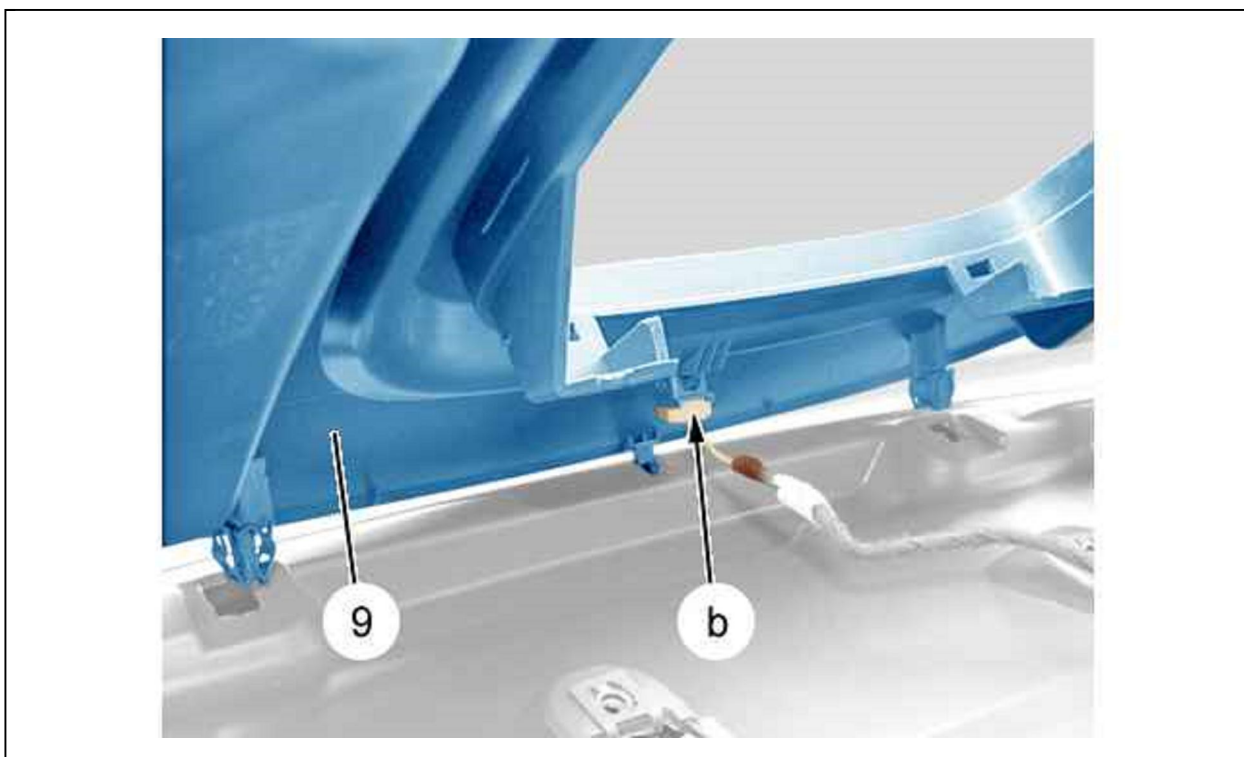


Figure : C5FG1GUD

Unclip the temperature sensor (at "b").

Remove the trim (9).

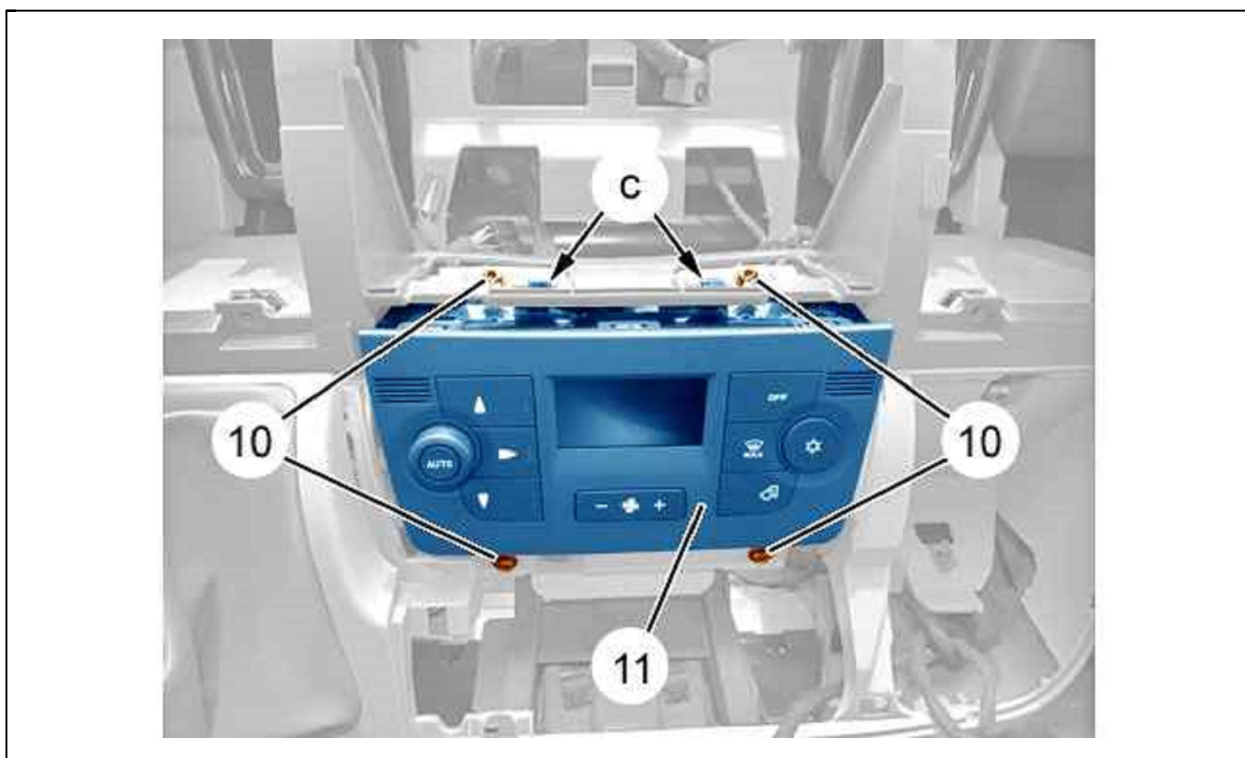


Figure : C5FG1GVD

Remove the bolts (10).

Unclip : The automatic air conditioning control panel (11) (at "c").

Detach : The automatic air conditioning control panel (11) (towards the interior of the dashboard).

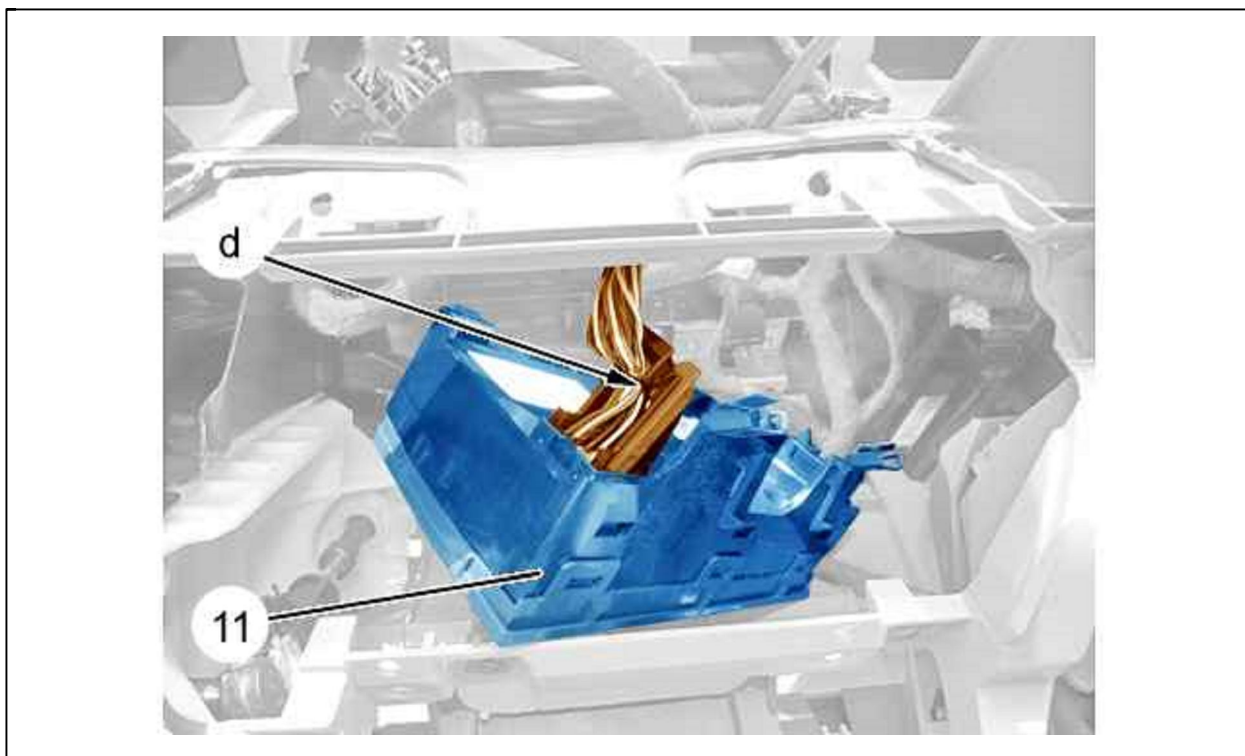


Figure : C5FG1GWD

Disconnect the connector (at "d").

Remove : The automatic air conditioning control panel (11).

3. Refitting

CAUTION : Check that all the various equipment operates, before refitting the manual air conditioning control panel (11).

Proceed in the reverse order to removal.

Reconnect the battery.

Check the operation of the equipment.