



ACCELERATOR PEDAL POTENTIOMETER

Accelerator pedal position is converted into an electrical voltage signal and sent to the engine control unit by a potentiometer on the pedal unit assembly.

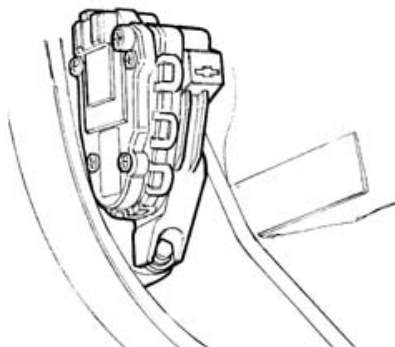

The accelerator pedal position sensor is used, together with rpm level, to establish injection times and relative fuel pressure.

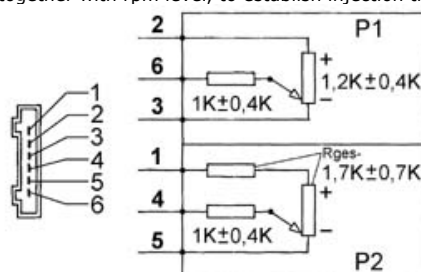

- 1 - 5V positive.
- 2 - 5V positive.
- 3 - Negative.
- 4 - Analogue signal.
- 5 - Negative.
- 6 - Analogue signal.