

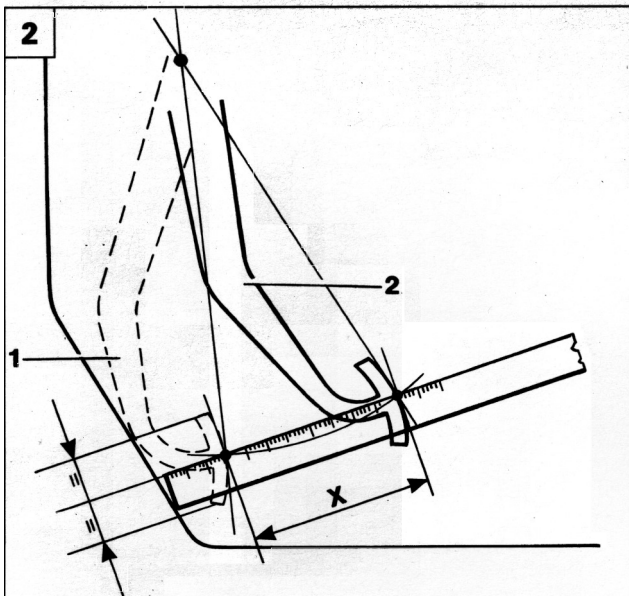
P3W005C01

**Dismantling-fitting clutch pedal**

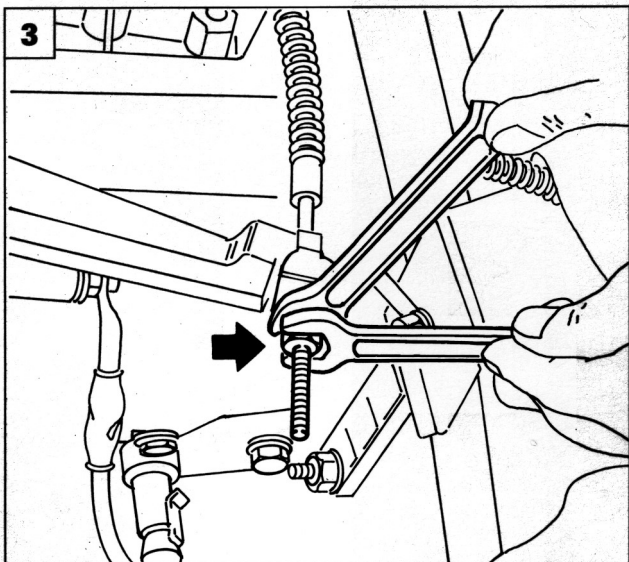
To remove the clutch pedal unscrew nut A and withdraw screw B indicated in figure.



*parts concerned prior to final assembly.*

**ADJUSTING CLUTCH PEDAL POSITION****Measuring clutch pedal travel**

1. Pedal at end of travel
2. Pedal at rest
- X. Pedal travel =  $125 \pm 5$  mm

**Adjusting clutch pedal position**

Proceed as follows to adjust clutch pedal:

- settle clutch release mechanism by pressing pedal fully down 2 or 3 times;
- check that travel "X" is  $125 \pm 5$  mm. Measure travel with rule aligned with pedal centre line. It is equivalent to the distance between position where pedal is pressed fully to floor and position with pedal at rest.

**NOTE** *Adjust travel by turning clutch cable nut and lock-nut.*