


## CROMA 2.2 AUTOMATIC TRANSMISSION FLUID CHECK LEVEL AND TOP UP IF NECESSARY 0010T45 (AUTOMATIC TRANSMISSION, AUTOMATIC TRANSMISSION, AUTOMATIC TRANSMISSION, AUTOMATIC TRANSMISSION)

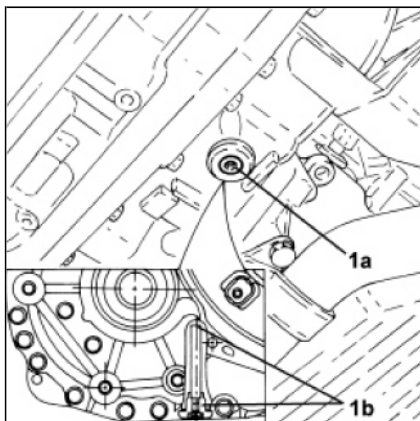


- Position the vehicle on a lift.

- With the engine coolant cold, start the engine and, with the brake pedal pressed, move the gear selector twice from position P to position D and viceversa keeping the selector in each position for 2 seconds.

- Let the gearbox oil temperature stabilize at between 35 and 45°C connecting the Examiner.

### Op. 7055854 UNDER ENGINE PROTECTION/GUARD - R.R.


1. Remove the automatic transmission fluid level control plug (1a) and check that the fluid comes out of the opening in the drain plug (1b).

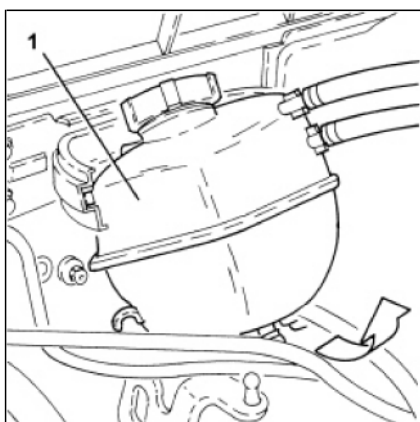

- If it does not come out, proceed as described below.

- Retighten the automatic transmission fluid level control plug.

1. Remove the engine coolant supply reservoir from the mounting bracket without disconnecting the pipes.

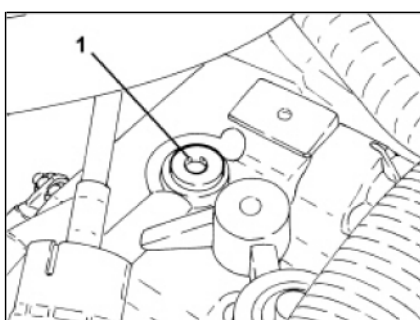

1. Remove the automatic transmission fluid filler plug.

- Add 0.5 litres of recommended fluid through the filler opening.

Component	Type	Description	Classification	Qty.	Validity
AUTOMATIC TRANSMISSION (6 speed)	Oil	TUTELA GI/VI	-	3,320 kg	1.9 JTD 16V CAE
- for changing oil at Service Centre					2.4 JTD 20V CAE

- With the brake pedal pressed, move the gear selector twice from position P to position D and viceversa keeping the selector in each position for 2 seconds.


- Place the selector in P and operate the parking brake (it is advisable to use chocks to lock the wheels).

- Remove the automatic transmission fluid level control plug once again and check that the fluid comes out of the opening in the drain plug.

- If the fluid does not come out, repeat the above operations.

- Clean any traces of oil from the area of the drainage opening and tighten the automatic transmission fluid level control plug to the recommended torque.

Before tightening check that the O ring fitted on the plug is not damaged. If it is

 damaged, replace the seal.

Component	Fastening	dia	Value (daNm)	Validity
Automatic transmission fluid level check plug	-	-	(automatic gearbox side) 0.6 - 0.8	1.9 JTD 16v CAE 2.4 JTD 20v CAE

- Tighten the automatic transmission fluid filler plug to the recommended torque.

Component	Fastening	dia	Value (daNm)	Validity
Automatic gearbox oil filler plug	-	-	(automatic transmission side) 2.4 ÷ 3.6	1.9 JTD 16v CAE 2.4 JTD 20v CAE

- Place the engine coolant supply reservoir mounting bracket in its housing.

**Op. 7055B54 UNDER ENGINE PROTECTION/GUARD - R.R.**

- Remove the vehicle from the lift.