



## Vehicle Information

Make: FIAT

Model: BRAVA / BRAVO

Year: 97

### Main Connections

+12v Wire: BROWN

+12v Location: IGN SWITCH

Ignition Wire: ORANGE

Ignition Location: IGN SWITCH

Earth Wire:

Earth Location: Connect to a good chassis earth

Indicator 1 Wire: BLUE/BLACK BLUE

Indicator 2 Wire:

Indicator Location: RED 14 PIN CONNECTOR FRONT OF THE FUSE BOX

### Pin Switch Connections

Door Wire: WHITE/RED

Door Location: O/S DOOR SWITCH

Boot Wire: TEST AT LAMP

Boot Location:

### Immobiliser Connections

Starter Immobiliser: RED/BLACK

Starter Location: IGN SWITCH

Fuel Immobiliser: TEST

Fuel Location:

### CDL Connections

CDL Lock Wire: WHITE

CDL Unlock Wire: BLUE

CDL Pulse Type: NEG PULSE

CDL Location: O/S DOOR HARNESS

### Window Closure Connections

OSF Window:

NSF Window:

OSR Window:

NSR Window:

Window Pulse Type:

Window Location:

### Sensor Connections

RPM:

Speed Sense:

RPM Location:

Speed Sense Location:

Notes:

Notes 2:

### Important:

*This technical information is supplied as guidance only. All connections listed above must be tested prior to connection. GT Technical cannot be held responsible for false or incorrect information withheld in this document resulting in damage to either vehicle or alarm. This information is to be used as guidance with only GT Products.*