




CROMA 2.2 FRONT MODULAR COURTESY LIGHT UNIT - R+R 7040E50

[back to ROOF PANEL LINING - R.R.](#)

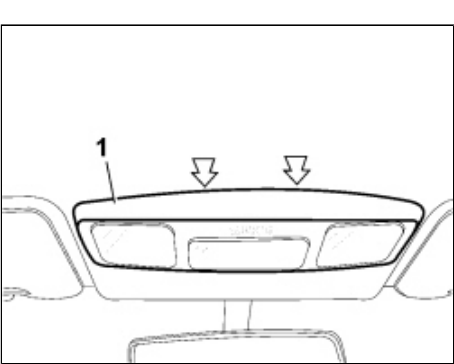


 Removing ([Refitting](#) )



- Open the front side door.
- Turn the ignition key to the OFF position.
- Disconnect the negative battery terminal.

	Description	Connector
	BATTERY	See A001 BATTERY

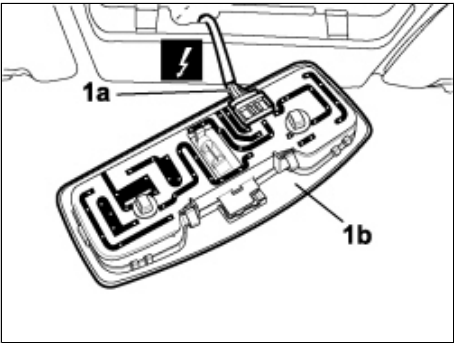1. Use a screwdriver on the retaining clips located in the area illustrated in the diagram and release the courtesy light.
1. Disconnect the electrical connection (1a) from the courtesy light (1b) and remove the courtesy light (1b).



	Description	Connector
1a	FRONT COURTESY LIGHT	See G010 FRONT COURTESY LIGHT

 Refitting ([Removing](#) )

- Connect the electrical connector and fit in place.

	Description	Connector
	FRONT COURTESY LIGHT	See G010 FRONT COURTESY LIGHT

- Connect the battery.

	BATTERY	See A001 BATTERY