


E5060 - CRUISE CONTROL - WIRING DIAGRAM

WIRING DIAGRAM

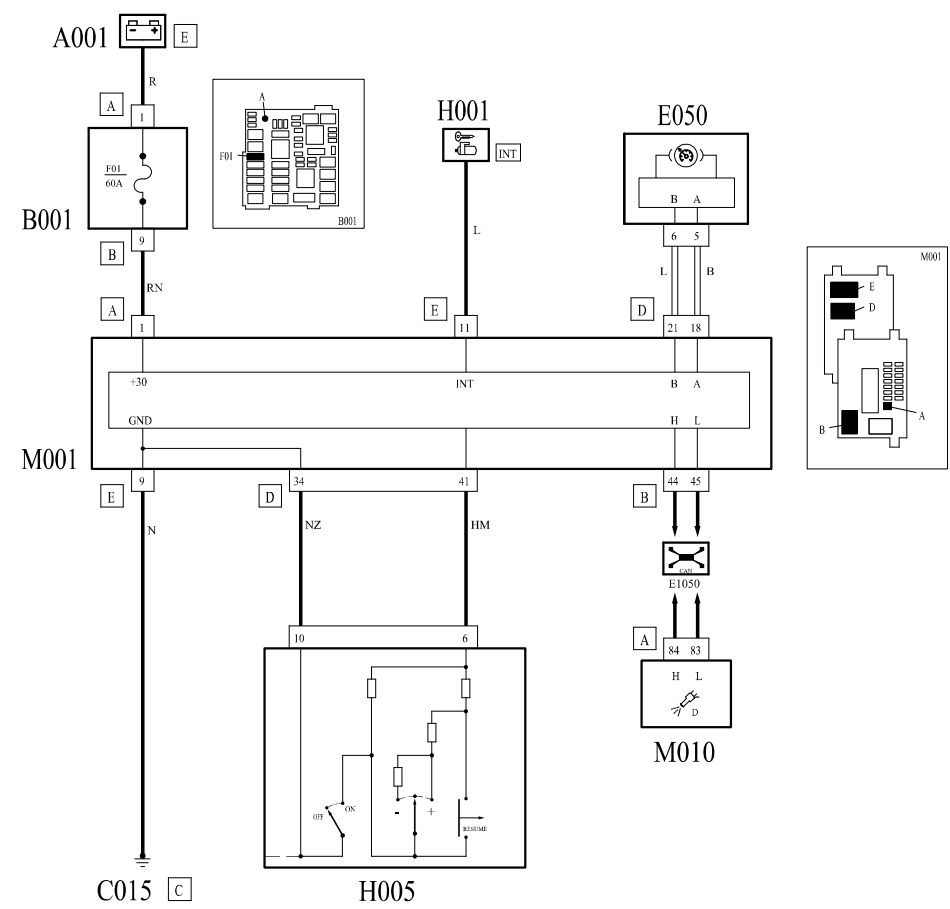

COMPONENTS

COMPONENT CODE	DESCRIPTION	REFERENCE TO THE OPERATION
A001	BATTERY	Op. 5530B10 BATTERY - R+R

<u>B001</u>	JUNCTION UNIT	-
<u>C015</u>	DASHBOARD EARTH, DRIVER'S SIDE	-
<u>E050</u>	INSTRUMENT PANEL	<u>Op. 5560B10 CONTROL PANEL - R+R</u>
<u>H001</u>	IGNITION SWITCH	<u>Op. 5520A10 IGNITION SWITCH ASSEMBLY - R+R</u>
<u>H005</u>	STEERING COLUMN SWITCH UNIT	<u>Op. 5550A10 STALK UNIT ASSEMBLY - R+R</u>
<u>M001</u>	BODY COMPUTER	<u>Op. 5505A32 BODY COMPUTER - R.R</u>
<u>M010</u>	ENGINE MANAGEMENT CONTROL UNIT	<u>Op. 1060G80 DIESEL ELECTRONIC INJECTION CONTROL UNIT - R.R</u>