



NUOVA BRAVO 1.4 16v GAS DISCHARGE DIPPED/MAIN BEAM HEADLAMP BULB - R.R. 5540B45

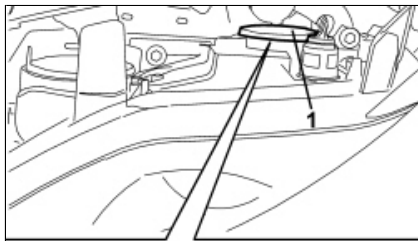

 Removing ([Refitting](#) )

- Open the bonnet.
- For the left headlamp only.


Op. 5050A12 WINDSCREEN WASHER FLUID RESERVOIR FILLER PIPE (IN ENGINE COMPARTMENT) - R.R.

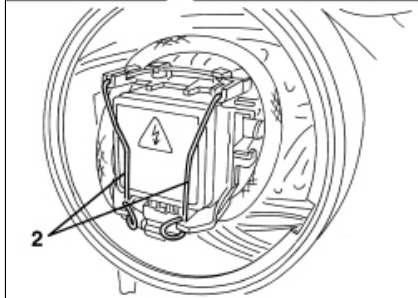


- For the left headlamp only.

Op. 7210A03 R.R. BRACKET CONNECTING FRONT END TO SIDE PANEL/STRUT


1. Remove the rubber cover.
2. Release the bulb retaining clips.

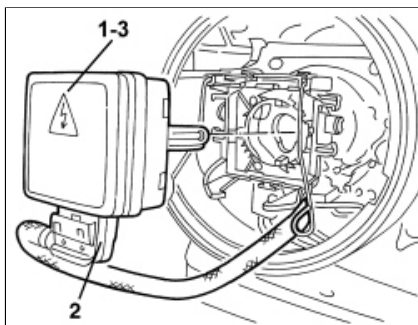



1. Extract the bulb from the bulb holder.


 If the bulb is working properly, do not touch it with your hands. If this happens, clean the bulb with alcohol.

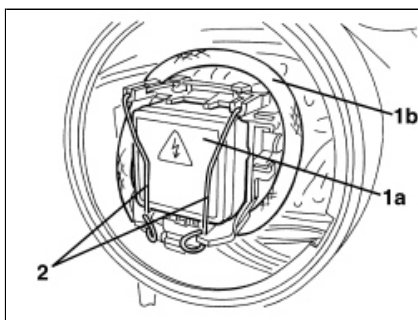2. Disconnect the electrical connection for the bulb.
3. Keep the bulb.



 Refitting ([Removing](#) )

- Check the condition of the bulb and make sure that it is clean.

 Do not touch the bulb with your hands. If this happens, clean the bulb with alcohol

- Connect the electrical connection for the bulb.

1. Position bulb (1a) in its seat and position the electrical wiring (1b) as shown in the figure.
2. Do up the bulb retaining clips.

- Refit the rubber cover.
- Close the bonnet.
- Check that the bulb is working.