



To locate the fuse, refer to the tables on the following pages.

FUSE CARRIER fig. 45

The fuse carrier is located under the oddments tray on the driver's side.

To reach the fuses:

- 1) Raise the oddments tray compartment flap.

The numbers indicating the electrical components corresponding to each fuse can be seen on the inside of the flap inner wall.

- 2) Take out the inner cover, rotating the two knobs **A**.

Use pincers **C** located near the fuse carrier to remove the fuse more easily.

After use return them to their place.

The group of fuses marked with the letter **B** contains spare filaments.



fig. 45

located near the fuse
the fuse more easi-

them to their place.

is marked with the
bare filaments.

IMPORTANT Never turn the ignition key at **MAR** with a fuse removed. If the "fault" would be recorded in the memory by the airbag control unit. In such an event, go to a Fiat Dealership to reset the fault on the airbag warning light stored in the memory.

FUSES IN THE ENGINE COMPARTMENT

General protection fuses (MAXI-FUSE) fig. 46

The car is fitted with a set of general protection fuses (MAXI-FUSE) that individually protect, besides the fuses for the various services, the electrical system functions.

Press the 2 locking side tabs and remove the cover.

Do not make these replacements yourself, but go to a Fiat Dealership.

Fuses on the wall separating engine compartment from the passenger compartment fig. 47

Remove the protection cover from the fuse to be replaced.

Replace and refit the cover.

Fuses on the battery case fig. 48

Press the two locking tabs and remove the cover.

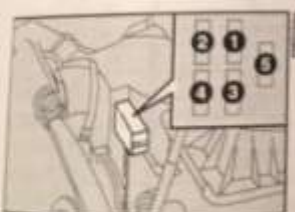


fig. 46



fig. 47



fig. 48

System/Component	Fuse no.	Ampere	Location
Right-hand main beam	1	10	fig. 45
Left-hand main beam	2	10	fig. 45
Right-hand dipped beam	8	10	fig. 45
Left-hand dipped beam	4	10	fig. 45
Right-hand number plate light	6	10	fig. 45
Left-hand number plate light	7	10	fig. 45
Brake lights	13	15	fig. 45
2nd brake light	13	15	fig. 45
Front right side light	9	10	fig. 45
Front left side light	7	10	fig. 45
Rear right side light	7	10	fig. 45
Rear left side light	4	10	fig. 45
Reversing light	13	15	fig. 45
Front direction indicators	13	15	fig. 45
Side direction indicators	13	15	fig. 45
Rear direction indicators	13	15	fig. 45
Rear fog light	3	20	fig. 45
Fog light	16	15	fig. 45
Clock light	12	10	fig. 45
Instrument panel light	12	10	fig. 45
Vanity mirror light	12	10	fig. 45
Spot light	12	10	fig. 45
Cigar lighter light	6	10	fig. 45
Luggage compartment light	12	10	fig. 45

System/Component

Front ceiling light
Rear ceiling light
Door ceiling light
Adaptor light
Heating and vent
Sound system
Main beam warn
Fog light warning
Airbag circuit
Direction indica
Hazard warning
Side lights warn
Heated rear wi
Rear fog light w
Fat CODE war
Lambda sensor
Front window
Rear window
Sound system
Connect (+30
Navigator (+3
Connect-rav
Sound system
Connect (+11

System/Component	Fuse no.	Ampere	Location
Front ceiling light	12	10	fg 45
Boot ceiling light	12	10	fg 45
Rear ceiling light	12	10	fg 45
Ashtay light	6	10	fg 45
Heating and ventilation system light	7	10	fg 45
Sound system light	6	10	fg 45
Main beam warning light	2	10	fg 45
Fog light warning light	20	15	fg 45
Airbag circuit	23	7.5	fg 45
Direction indicator light	13	15	fg 45
Hazard warning light	13	15	fg 45
Side lights warning light	6	10	fg 45
Heated rear window warning light	22	10	fg 45
Rear fog light warning light	3	20	fg 45
Fat CODE warning light	4	7.5	fg 46
Lambda sensor heater (petrol version)	1	15	fg 46
Front window riser	18	20	fg 45
Rear window riser (on relay/fuse holder bracket)	-	25	fg 45
Sound system (+30)	12	10	fg 45
Connect (+30)	12	10	fg 45
Navigator (+30)	12	10	fg 45
Connect-nav (+30)	13	15	fg 45
Sound system (+15)	13	15	fg 45
Connect (+15)			

System/Component	Fuse no.	Ampere	Location
Navigator (+15)	13	15	fg 45
Connect-nav (+15)	13	15	fg 45
ABS system (LH versions)	2	60	fg 47
Turbodiesel injection protection (RH versions)	2	60	fg 47
Glow plugs (RH versions)	2	60	fg 47
ABS control unit	2	10	fg 48
ABS solenoid valve coil	2	10	fg 48
Horn	11	20	fg 45
Heated rear window	18	30	fg 45
Electric mirrors movement	17	7.5	fg 45
Current socket	19	25	fg 45
Cigar lighter	9	15	fg 45
Front seat height adjustment	25	25	fg 45
Recirculation	17	7.5	fg 45
Headlight washer	10	20	fg 45
Electric mirrors defrosting	22	7.5	fg 45
Driver's heated mirror	15	30	fg 45
Refrigerator	25	25	fg 45
Cellular telephone	13	15	fg 45
Windscreen wiper	10	20	fg 45
Rear window wiper	10	20	fg 45
Electric sunroof	25	25	fg 45
Hazard lights power supply	14	10	fg 45
Side lights power supply	3	20	fg 45

System/Component

Clock power supply
Instrument panel
Anti-theft warning
Anti-theft control
Anti-theft reset
Remote control
Door lock control
Fog light relay
Cigar lighter and
Electric seat heater
Dipped beam
Fan relay coil
Fan relay coil
Electronic injection
Heated rear window
12V socket
Heater relay
Sunroof relay
Fat CODE
Pre-heating
Fat CODE
Electronic ignition
Compressor

	Fuse no.	Ampere	Location
On-board power supply	13	10	Fig. 45
Passenger panel power supply	13	10	Fig. 45
Anti-draft warning lights	14	10	Fig. 45
Anti-draft control unit	14	10	Fig. 45
Anti-draft receiver	12	10	Fig. 45
Remote control receiver	12	10	Fig. 45
Door lock control unit (on relay/fuse holder bracket)	13	10	Fig. 45
Fig. light relay coil	3	20	Fig. 45
Cigar lighter and windscreen wiper relay coil	3	20	Fig. 45
Electric seat riser relay coil	17	7.5	Fig. 45
Speed beam relay coil	17	7.5	Fig. 45
Fan relay coil	2	10	Fig. 45
Hi-relay coil (2nd speed)	4	7.5	Fig. 48
Electronic injection relay coil	4	7.5	Fig. 48
Heated rear window relay coil	16	7.5	Fig. 45
12V socket relay coil	16	7.5	Fig. 45
Heater relay coil	17	7.5	Fig. 45
Servo-relay coil	3	20	Fig. 45
For CODE (only 100 16v engine)	3	7.5	Fig. 48
Pre-heating glow plugs control unit (LH versions)	3	60	Fig. 47
For CODE control unit (only JTD 115 engine)	4	7.5	Fig. 48
Electronic injection control unit	1	7.5	Fig. 48
Ignition switch	3	30	Fig. 45
Compressor	9	15	Fig. 45

Systems/Component	Fuse no.	Ampere	Location
Brake electrolyte consumption warning light	8	10	Fig. 45
Headlight beam adjuster	8	10	Fig. 45
Diesel filter (Diesel version)	3	15	Fig. 48
Electronic injection (only 100 16v engine)	4	30	Fig. 46
Electronic injection (only JTD 115 engine)	5	30	Fig. 46
Fuel pump	5	30	Fig. 46
Headlight washer pump	5	20	Fig. 48
Window washer pump	10	20	Fig. 45
Interconnecting control unit protection	1	80	Fig. 46
Secondary control unit protection	2	60	Fig. 46
Alarm siren	13	10	Fig. 45
Car interior fan	5	30	Fig. 45
Radiator fan	5	30	Fig. 46
Radiator fan (only 100 16v version with climate control LH drive)	5	30	Fig. 46
ABS circuit protection (RH drive)	5	30	Fig. 46
Radiator fan (only 100 16v version with heating LH drive)	5	30	Fig. 46
Radiator fan (only JTD 115 version with climate control)	5	30	Fig. 46
Radiator fan (only JTD 115 version with heating)	5	30	Fig. 46
Engine cooling fan (only JTD 115 version LH drive)	1	50	Fig. 47
Engine cooling fan (RH drive)	30	3	Fig. 45
Additional heater control unit	31	20	Fig. 45
Front door lock window regulators (ABO)	32	25	Fig. 45
Rear window regulators (ACEP)			