



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	FIAT	MOD.	SEICENTO	YEAR	98 →	PETROL <input checked="" type="checkbox"/>	DIESEL <input type="checkbox"/>
ALARM/SIREN POSITION	Position the modular system and the siren in the engine compartment, behind the headlamp on the driver's side.						
CENTRAL UNIT POSITION	The modular systems and the modules should be positioned on the left-hand-side under the dashboard. When routing, make a hole on the right of the windshield-wiper motor on the driver's side.						
POWER SUPPLY	+ 30: Connect to the 4 mm ² RED wire in the general supply wiring of the fuse box. - 31: Connect with a cable-end connector to one of the original ground terminals located on the left lateral bulkhead on the driver's side.						
IGNITION WIRE	Connect to the 0,5 mm ² ORANGE wire at position nr.86 of the red fuel pump relay support, located on the drivers side of the engine compartment, fastened on the bracket of the fuel injection unit.						
DIRECTION INDICATORS	Connect to the 0,75 mm ² LIGHT BLUE and LIGHT BLUE/BLACK wires at positions nr. 1 and nr. 2 of the 20 way white connector located behind the driver's floor trim.						
ELECTRIC WINDOWS	Positive control signal Driver's window: Cut the 1,5 mm ² WHITE/RED wire in the wiring harness that comes out of the relevant switch. Passenger's window: Cut the 1,5 mm ² WHITE/RED wire in the wiring harness that comes out of the relevant switch.						
CENTRAL DOORS LOCKING	Negative control signal Connect to the 0,75 mm ² WHITE/YELLOW unlock and LIGHT BLUE/RED lock wires at positions nr. 6 and nr. 7 of the 8 way white connector located behind the driver's floor trim.						
IMMOBILISATION POINT	Fuel pump Cut the 0,5 mm ² ORANGE wire at position nr. 86 of the red fuel pump relay support, located on the drivers side of the engine compartment, fastened on the bracket of the fuel injection unit.						
STARTER	+50: Cut the 2,5 mm ² RED wire in the wiring harness that comes out of the 3 way transparent connector at the ignition switch.						
BONNET SWITCH	Install an additional switch on the headlamp support grill, above the headlamp on the driver's side.						
DOORS SWITCH	Connect to the 0,75 mm ² WHITE/BLACK wire in the wiring harness that comes out of the original switch on the driver's side.						
BOOT SWITCH	Install an additional switch on the side member of the rear door.						