


-Remove the rear seats: in the centre and on the right side.

1. Undo the fixing bolts and remove the left guide (1a) for the right side seat and the right guide (1b) for the centre seat.

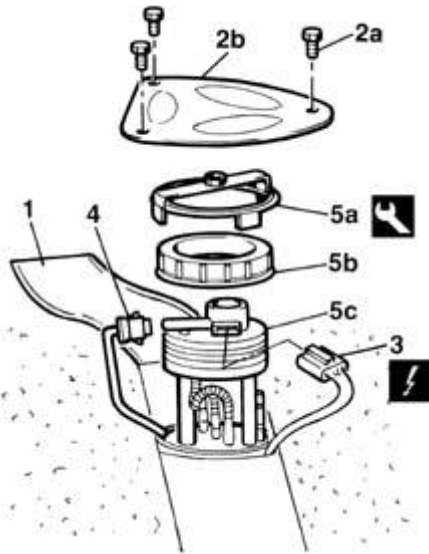

1. Lift the pre-cut section of the floor covering to gain access to the fuel pump flap.

2. Unscrew retaining bolts (2a) and remove protective cover (2b).

3. Disconnect the electrical connection from the electric fuel pump and level gauge.


	Name	Connector
3	Fuel pump and sender unit	<a href="#">N40</a>

4. Disconnect the fuel supply pipe from the quick-release fitting.

5. Use tool (5a) to unscrew lock collar (5b), then remove the fuel pump together with the level gauge.

	Name	Country
5a	Key	1.870.736.000

Refitting ( [Removing](#) )

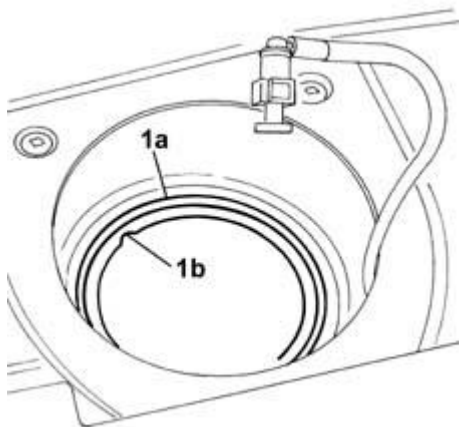

1. Position the fuel pump in the special housing in the tank, taking care to ensure that the seal (1a) is correctly positioned.

The position of the fuel pump is fixed and is determined by a notch (1b) in the tank housing which should correspond with the projection on the pump drip tray.

Fit the lock-nut and use the tool to tighten to torque.

	Name	Country
--	------	---------

-	Key	1.870.736.000
---	-----	---------------

Connect the fuel delivery pipe to the quick-release fitting.

Connect the fuel pump and level gauge electrical connection.

Tighten the fuel pump protective cover retaining bolts.

Refit the floor covering.

Refit the seat guides, tightening the fixing bolts to the recommended torque.

	Fastening	Component	Ø	Value (daNm)
-	Bolt	REAR SEAT MOUNTING SUPPORT.	M10 x 1.25	3.4