



fig. 28

### Fuses in the fusebox fig. 28

- △ 10A Hazard lights, direction indicators, car alarm control unit.
- ↔ 7.5A Door mirror control, remote control reception unit.
- ⊕ 7.5A Rear foglights, rear foglight instrument panel indicator.
- SERVICE SERVICES 10A Instrument panel, reverse lights, air bag, two-directional pump for the windscreen and rear window washers, Fiat CODE system.
- ⊖ 10A Right dipped beam headlight, headlight beam regulator, headlight washers.
- ⊖ 10A Left dipped beam headlight.
- ⊖ 20A Windscreen wiper, windscreen and rear window washer inserter.
- ⊖ 20A Passenger cabin fan motor.
- ⊖ 10A Right full beam headlight.

147

## IF A FUSE BLOWS

- ⊖ 10A Left full beam headlight, full beam headlights instrument panel indicator light.
- ⊖ 7.5A Digital clock, internal and boot lights, door courtesy lights, remote control receiver.
- ⊖ 25A Radiator fan.
- ⊖ 20A Horn, cigar lighter, stop lights, sound system power supply.
- ⊖ 20A Rear window wiper, sunroof.
- ⊖ 25A Rear window heater, rear window heater instrument panel indicator light, electric mirror defrosting.
- ⊖ 10A Right side light and left taillight, right number plate light, instrument panel lighting and glove compartment light.
- ⊖ 10A Left side light and right taillight, left number plate light, dashboard control illumination.

### Fuses on the additional support

Remove panel **A-fig. 28** on the left of the dashboard.

- 15A Central door locking control unit.
- 20A Foglights, foglight instrument panel indicator light.
- 10A ABS system.
- 30A Electric windows.
- 20A Headlight washer pump.

### Fuses in the engine compartment

Remove press-fit cover **A-fig. 29** near the left damper.

- 30A Climate control unit.
- 40A Additional radiator fan (only vehicles with climate control unit).

148