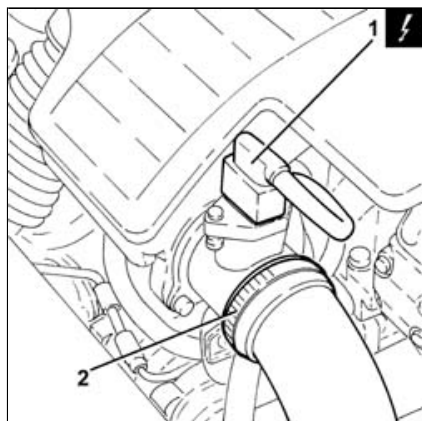


## PANDA 1.3 JTD 16v glow plugs - r+r 5520C10


Removing ( [Refitting](#) )

Disconnect the battery negative terminal.


1. Disconnect the electrical connection from the air flow meter.

	Name	Connector
1	Air flow meter	<b>K41</b>

2. Loosen the band and disconnect the the turbocharger air inlet sleeve from the rigid pipe, air flow meter side.

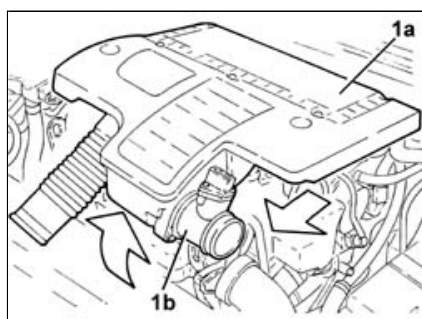

1. Remove the air filter (1a) complete with air flow meter (1b) by releasing from the underlying pins and then from the rear fastenings.

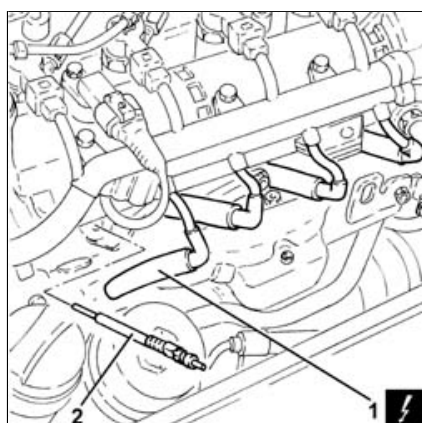

1. Disconnect the electrical connections from the heater plugs.


	Name	Connector
1	Heater plugs	<b>A40A</b>
	Name	Connector
1	Heater plugs	<b>A40B</b>
	Name	Connector
1	Heater plugs	<b>A40C</b>
	Name	Connector
1	Heater plugs	<b>A40D</b>

2. Undo and remove the glow plugs.

Refitting ( [Removing](#) )

1. Fit the heater plugs in their seats and tighten them to the recommended torque.

--	--	--	--	--

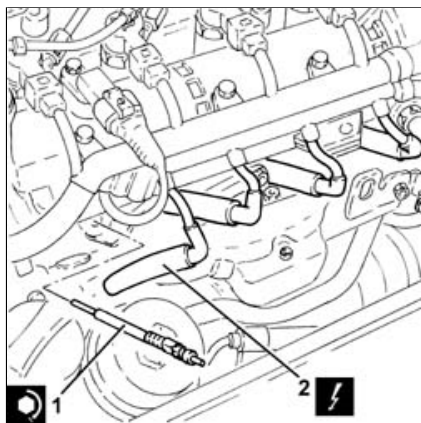

		Fastening	Component	Ø	Value (daNm)
1		-	GLOW PLUGS	M8	(Cylinder head side) 0.9 ÷ 1.0

2. Connect the electrical connections to the heater plugs.

		Name	Connector
2		Heater plugs	<b>A40A</b>
		Name	Connector
2		Heater plugs	<b>A40B</b>
		Name	Connector
2		Heater plugs	<b>A40C</b>
		Name	Connector
2		Heater plugs	<b>A40D</b>

Fit the air filter complete with air flow meter in place.

Connect the air intake sleeve to the turbocharger, air flow meter side, and tighten the band.

Connect the electrical connection to the air flow meter.

		Name	Connector
-		Air flow meter	<b>K41</b>

Connect the battery negative terminal.