

V - DRAINING - REFILLING THE TRANSMISSION

A - DRAINING DURING SERVICING

Prerequisites:


- transmission to be drained when warm to remove the impurities in suspension in the oil.

Draining is only partial since the converter cannot be totally drained.

Total capacity of the transmission:

- minimum: 7.7 litres,
- maximum: 8.3 litres.

When draining, approximately 3 litres are removed.

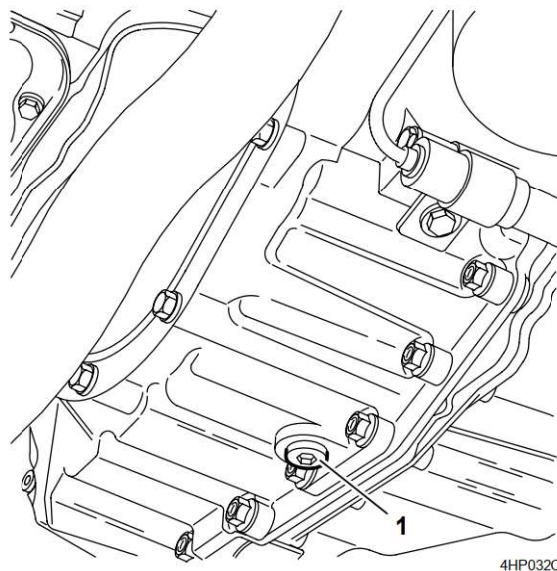

Drain plug (1).

B - FILLING

Oil is filled through the filler plug.

Use a funnel with a very fine strainer (mesh 0.15 mm).

Amount of oil to be added after draining (approximately) 3 litres.

Complete the operation by checking the dipstick with the engine running (idling).

ZF 4HP20 AUTOMATIC TRANSMISSION