

Doblò 1.9 JTD DIESEL ENGINES ELECTRONIC MANAGEMENT - Location of components E5050

[DIESEL ENGINES
ELECTRONIC MANAGEMENT -
Description](#)


[DIESEL ENGINES ELECTRONIC
MANAGEMENT - Wiring
diagram](#)

**[DIESEL ENGINES ELECTRONIC
MANAGEMENT - Location of
components](#)**

[DIESEL ENGINES ELECTRONIC
MANAGEMENT - Functional
description](#)

Packet
print

LOCATION OF COMPONENTS

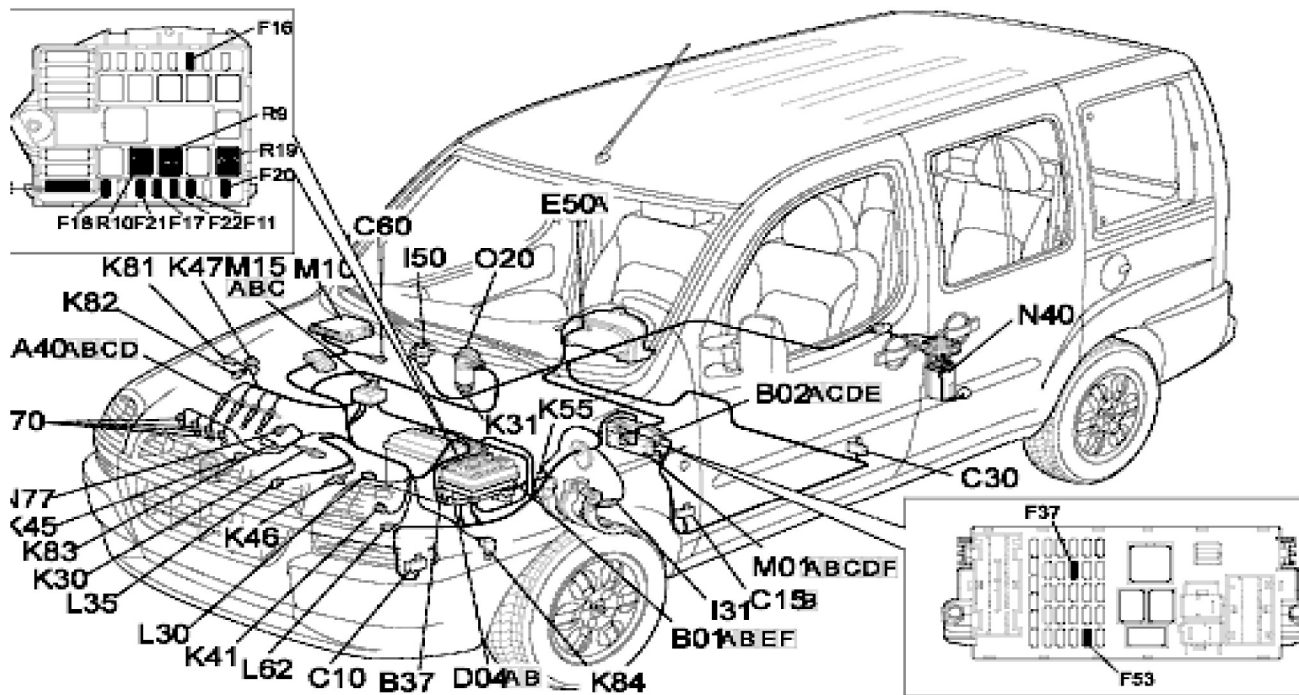

↔ ↑ ↓ + - =

[Full-size](#)

COMPONENTS

Component code	Name	Assembly reference
A40	Heater plugs	-
A40	Heater plugs	1060G
B1	Engine compartment junction unit	-
B1	Engine compartment junction unit	1004B
B1	Engine compartment junction unit	5505A
B2	Junction unit under dashboard	-
B2	Junction unit under dashboard	5505A
B37	Spark plugs (MAXI FUSE) fuse	-
B37	Spark plugs (MAXI FUSE) fuse	1060G

C1	Battery earth	-
C10	Front left earth	-
C15	Facia earth, driver's side	-
C30	Left rear earth	-
C60	Earth on engine	-
C60	Injection ECU earth	-
D4	Front/engine coupling	-
D4	Front/engine coupling	1004B
D4	Front/engine coupling	1060G
D36	Rear right door connection	-
E50	Instrument panel	-
E50	Instrument panel	5560B
I30	Brake pedal switch	-
I31	Clutch pedal switch	1060D
I50	Inertial switch	1040A
K100	Fuel heating resistance and temperature sensor	1060G
K30	Insufficient engine oil pressure (switch) sensor	-
K30	Insufficient engine oil pressure (switch) sensor	1060G
K30	Insufficient engine oil pressure (switch) sensor	1084A
K31	Water in diesel filter sensor	1044B
K41	Air flow meter	1092C
K41	Air flow meter'	1060G
K45	Coolant temperature sender unit	1088C
K45	Engine temperature sensor for i.e.	1056B
K46	RPM sensor	1060D
K46	Rpm sensor	1060G
K47	Timing sensor	-
K47	Timing sensor	1060G
K55	Accelerator pedal potentiometer	-
K55	Accelerator pedal potentiometer	1068A
K81	Fuel temperature sensor	1060G
K82	Turbocharging sensor	1060G
K82	Turbocharging sensor	1072B

K83	Fuel pressure sensor	1060G
K84	Speedometer sensor	-
K84	Speedometer sensor	2180A
L30	EGR solenoid valve	1080C
L30	EGR solenoid	1080C
L35	Waste-gate solenoid valve	1064B
L62	Butterfly casing solenoid valve	-
M1	Body computer	-
M1	Body computer	5505A
M10	Engine management ECU	1056B
M10	Engine management control unit	-
M10	Engine management control unit	1060G
M10	Plug preheating control unit	1004B
M15	Heater plugs controlunit	1060G
M15	Plug preheating control unit	1004B
M15	Plug preheating control unit	1060G
M15	Plug preheating control unit	5520C
M19	Methane injection control unit	-
N40	Fuel pump and sender unit	1040A
N41	EPIC injection pump	1060A
N77	Fuel pressure regulator	1060E
O20	Diesel preheating resistor	1044D