
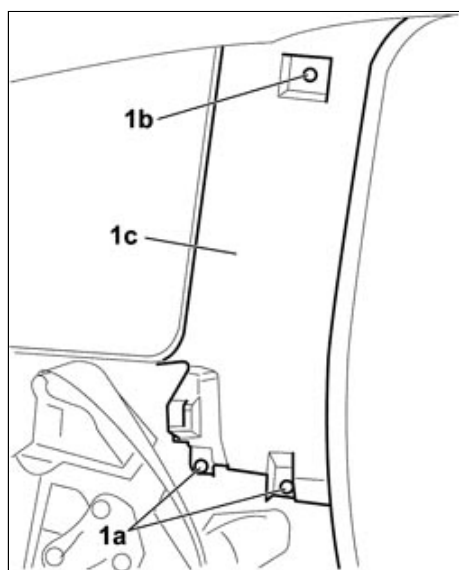



## CROMA 2.2 REAR PILLAR TRIM (ONE), LEFT OR RIGHT- R.R 7040H42



[back to ROOF PANEL LINING - R.R.](#) Removing ( [Refitting](#)  )

- Open the rear tailgate.
- Turn the ignition key to the OFF position.
- Disconnect the negative and positive battery terminals.

	Description	Connector
	BATTERY	<a href="#">See A001 BATTERY</a>

[Op. 7040B42 PROTECTION GRILLE FOR ANIMAL TRANSPORT - R and R](#)[Op. 7040B26 LOAD PLATFORM COVER BLIND - R+R](#)[Op. 7040G46 LOAD COMPARTMENT COURTESY LIGHT - R and R](#)[Op. 7050A20 ONE-PIECE REAR SEAT CUSHION - R.R.](#)[Op. 7040H50 REAR PANEL \(ONE\), LEFT OR RIGHT - R.R](#)[Op. 7040B24 LOAD COMPARTMENT TOP TRIM \(ONE\) - R+R](#)

1. Remove the cover located in the upper part of the trim, unscrew bolts (1a) and (1b), then remove the rear pillar trim (1c) from the vehicle.

 Refitting ( [Removing](#)  )

- Check that the rear pillar cover is not damaged.
- Position the rear pillar trim in the housing and tighten the fixing bolts.
- Reposition the cover located in the upper part of the trim.

[Op. 7040B24 LOAD COMPARTMENT TOP TRIM \(ONE\) - R+R](#)[Op. 7040H50 REAR PANEL \(ONE\), LEFT OR RIGHT - R.R](#)[Op. 7050A20 ONE-PIECE REAR SEAT CUSHION - R.R.](#)[Op. 7040G46 LOAD COMPARTMENT COURTESY LIGHT - R and R](#)[Op. 7040B26 LOAD PLATFORM COVER BLIND - R+R](#)[Op. 7040B42 PROTECTION GRILLE FOR ANIMAL TRANSPORT - R and R](#)

- Reconnect the negative and positive battery terminals.

	Description	Connector
	BATTERY	<a href="#">See A001 BATTERY</a>

- Close the rear tailgate.