


# NUOVA BRAVO 1.4 16v R.R. REAR BUMPER 7210E66

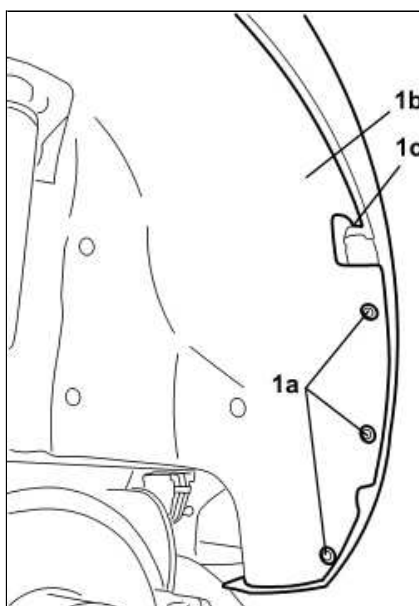


Removing ( [Refitting](#) )

- Position the vehicle on a lift.


**Op. 4450B06 LEFT REAR WHEEL - R.R**

**Op. 4450B08 RIGHT REAR WHEEL - R.R**

1. Working on both sides of the vehicle, undo the bolts (1a) fixing the bumper to the wheel arch (1b) and the bolts (1c) fixing it to the wings.

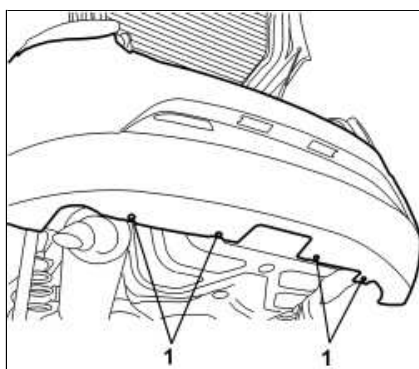

1. Undo the lower bolts fixing the bumper.

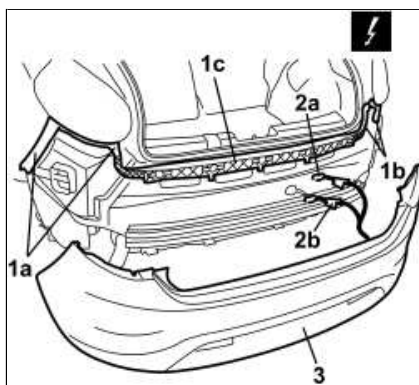

- Lower the vehicle.

1. Move the bumper slightly, releasing it from the side retainers (1a) and (1b) and from the centre retainer (1c).

2. Disconnect the electrical connections (2a) and (2b).

	Description	Connector
2a,2b	BUMPER/REAR COUPLING	<b>See D212 BUMPER/REAR COUPLING</b>

3. Keep the rear bumper.

Refitting ( [Removing](#) )

- Check that the bumper is not damaged.

- Connect the electrical connections.

- Position the bumper and fit in its seat, doing up the centre and side retainers.

- Raise the vehicle.

- Tighten the lower bolts fixing the bumper.

- Working on both sides of the vehicle, tighten the bolts fixing the bumper to the wheel arches and the bolts fixing it to the wings.

**Op. 4450B08 RIGHT REAR WHEEL - R.R**

**Op. 4450B06 LEFT REAR WHEEL - R.R**

- Remove the vehicle from the lift.