

Refitting ([Removing](#))


- Check that the bearing is not damaged.

1. Position the steering knuckle (1a) on the press, resting on a plate (1b).
2. Position the bearing (2a) on the steering knuckle.
3. Position the special tool on the bearing (2a).

	Description	Code	Function
3	Tool	1.875.057.000	Wheel hub bearing fitting


4. Fit the bearing (2a) in the housing using the press.

1. Fit the circlip in the housing.

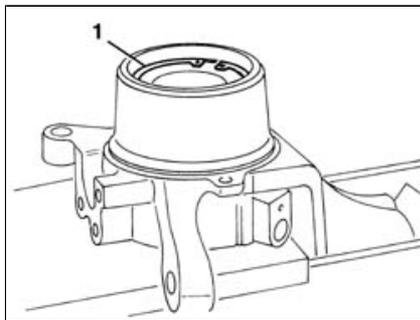

1. Position the hub (1a) on the press, resting on a plate (1b). Position the steering knuckle with the bearing (1c) on the hub (1a) and keep it in position.

2. Position the special tool on the steering knuckle.

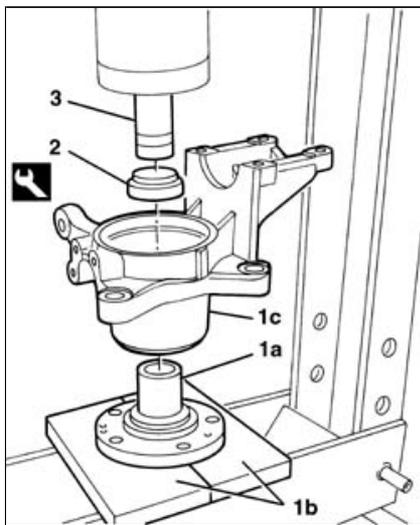

	Description	Code	Function
2	Tool	1.875.057.000	Wheel hub bearing fitting

3. Fit the steering knuckle with the bearing on the hub using the press.