


CHANGING A BARRELL

1


LIFT CASING OVER BY USING
SMALL SCREWDRIVER

CAREFUL NOT
TO BREAK THE
CASING

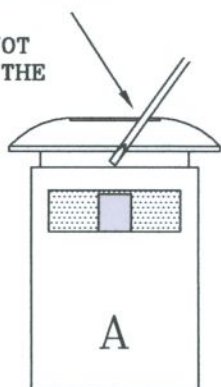


2

HOLD IN PLACE &
TURN TO DO OTHER
SIDE

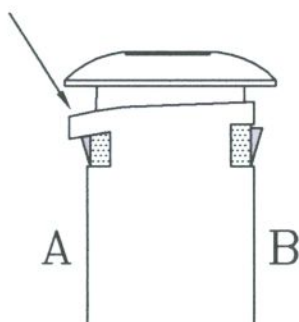


3

LIFT CASING OVER BY USING
SMALL SCREWDRIVER

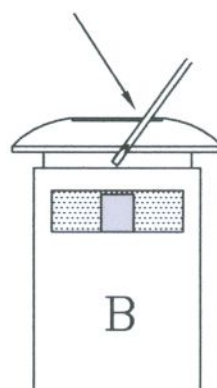


4

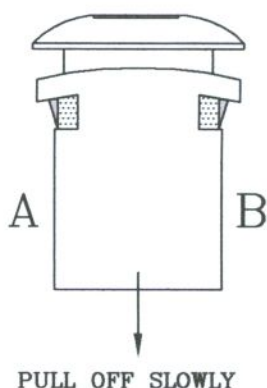

THERE SHOULD BE
A SPRING IN THE
BOTTOM OF THE CASING
OR STILL ON THE LOCK


5

TAKE CLIP OFF HOLDING
BARRELL IN.
(CAREFUL NOT TO LOOSE)

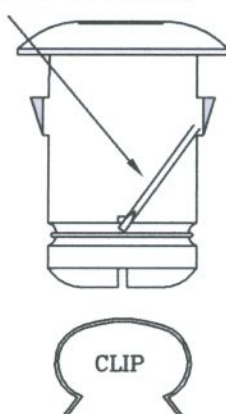

6

INSERT KEY &
SLIDE BARRELL
OUT

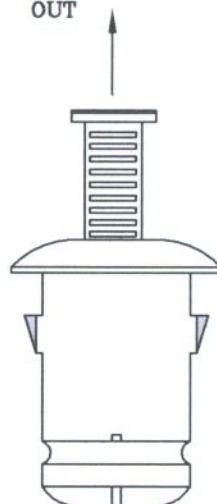

7

INSERT KEY &
SLIDE NEW
BARRELL IN



PUT CLIP
BACK ON



8




PUT SPRING
BACK ON



END OF
LOCK

THE TWO PRONGS
SHOULD GO ON EITHER
SIDE OF THE STEEL
NODULE (OVERLAPPING)

9

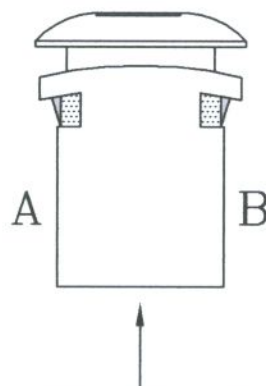

PUSH CASING BACK ON