

Start Stop Features and Benefits

- For the system to be activated the engine must be at normal running temperature.
 - For the system to be operational the battery must be charged more than 80%.
 - If the Heated Rear Windscreen is activated the engine will not stop or if stopped will restart.
 - If the wipers are at full speed the engine will not stop or if stopped will restart.
 - If the Air Conditioning is turned on full cold or full hot the engine will not stop or if stopped will restart.
 - Anything that will cause a heavy battery drain will cause the system to not stop or if stopped the engine will re start.
 - If the engine is stopped and the vehicle rolls forward faster than 5kph the engine will re start.
 - Any errors (faults) stored in the vehicles ECU's (computerized diagnostic system) will disable the system.
 - If when the engine is stopped the brake pedal is pumped, after three times the engine will restart.
 - The default position when the vehicle is started is for start & stop to be active, if not required it can be turned off at the start stop button.
-
- **If you have to jump start the vehicle you must follow the diagram, otherwise damage to the intelligent battery sensor will occur.**

