

116A ABS sensor lead connection right front wheel	162B Air conditioner wiring connection	216 Heated fuel filter fuse (20A)	262 30A fuse for electric cooling fan (40A for Diesel version)
117 Sensor on left rear wheel (ABS)	164 Front wiring connection	217 Heated fuel filter (P.T.C.)	263 125A maxifuse for version GT 1372 TB
117A ABS sensor lead connection left rear wheel	164A Front wiring connection	218 Diesel fuel system control relay	265 15A fuse for heated seat system
118 Sensor on right rear wheel (ABS)	165 Air-bag wiring connection	219 Engine cooling fan 2nd speed activation	266 Electronic control unit for EURO-BAG
118A ABS sensor lead connection right rear wheel	166 Alarm electronic control unit	220 Engine cooling fan 2nd speed activation relay	267 EURO-BAG lead connection (driver's side)
119 Fuel injection control unit BOSCH (1372 Turbo .e.)	167 Tester socket for alarm	221 Engine cooling fan 1st speed activation relay	268 Connection between front lead/engine
120 Engine oil pressure gauge sensor	170 Wiring connection for alarm	222 Compressor coupling activation relay	270 Connection with ABS
121 Electric sunroof wiring connection	171 Alarm activation button on bonnet lid	224 7.5A fuse for compressor electromagnetic coupling	271 Injection wiring connection with power steering sensor
122 5A injection system fuse (10A for Turbo .e. version, 15A for 1581 version)	172 Magnetic sensor on clutch	226 Emission control unit (EGR device)	273 Injection wiring connection with oil pressure gauge
124 Multiple relay	174 15A automatic transmission fuse	227 Potentiometer on injection pump	274 2 diode container
125 Hot Lambda probe	175 Automatic transmission relay	228 Water temperature sensor (EGR device)	276 Compressor control relay for air conditioner
126 Potentiometer on throttle valve	176 Speed selector lighting display and speed engaged indicator	229 Solenoid for EGR device	277 Air conditioner thermal safety switch
127 Water temperature sensor	177 Vehicle speed sensor	230 Diagnostic socket for emission control unit (EGR device)	278 Earth on body for ABS
128 Air temperature sensor	178 Safety ECU for automatic transmission	231 Injection/ignition control unit (1580)	281 Catalytic converter control unit (Japanese version)
129 Absolute pressure sensor	179 Shift-lock solenoid	232 3A fuse for injection memory protection	310 Heated driver's seat control relay
130 Earth on engine	180 Ignition switch solenoids	235 EGR solenoid	311 15A fuse for injection system
131 Earth on control unit	181 Automatic transmission ECU	236 40A protective fuse for pump system (in engine compartment)	312 25A fuse for injection system
132 IAW electronic ignition and injection control unit	182 Automatic transmission tester socket	237 Switch for electrically operated hood	313 Air temperature/absolute pressure sensor
133 Ignition coil unit	183 Switch on accelerator for automatic transmission	238 Connection between electric hood and supply cable	314 Engine cooling fan 1st speed timer
134 Spark plugs	185 Wiring connection for multiple bridges	239 Pump relay	315 Engine cooling fan 2nd speed relay
135 Step actuator	186 Multifunction switch on automatic transmission	240 Pump relay	316 Compressor electromagnetic coupling activation relay
136 Canister solenoid	187 Butterfly valve potentiometer for automatic transmission	241 Diodes	317 Four-level pressure switch
137 RPM and TDC sensor	188 Power module	242 Safety relay	318 7.5A fuse for compressor electromagnetic coupling
138 Tester socket for injection system	189 Pierburg solenoid (Waste-Gate)	243 Electrically operated hood motor	319 Air conditioner switch connection braid
139 Alternator	190 Idle adjustment actuator	244 Safety button for right hood cover	320 2.7 Ohm resistance for passenger side EURO-BAG charge
140 Starter motor	191 Injector cooling fan switch	245 Safety button for left hood cover	
141 Injector	192 Front wiring connection	245A Hood cover	
142 Passenger compartment air recirculation control switch	193 Injection system control relay	246 Connection between electric hood cables and rear cables	
143 Interior air recirculation actuator	194 Lambda probe and fuel pump control relay	247 Earths on rear panels	
144 Interior air recirculation control	195 10A fuse for fuel pump	248 Wiring for electric aerial	
145 Air conditioner/heater control light bulbs	196 10A fuse for Lambda probe	251 Connection between rear cable and boot lid cable	
146 Electrically-adjusted, heated door mirror, left	197 Timing sensor	253 Power earth	
147 Electrically-adjusted, heated door mirror, right	198 Knock sensor	255 Electric stop device for Fiat-Code	
148 Electrically-adjusted door mirror control buttons	199 Altitude corrector	256 Tester connection for Fiat-Code device	
150 Headlight washer fuse (20A)	200 Signal earth	257 Front lead connection for Fiat-Code device	
152 Fog lights relay	201 Power earth	258 Fiat-Code control unit	
153 Rear fog lights relay with fog lights switched on	202 Air flow meter (cubic meter)	259 Aerial for Fiat-Code	
154 20A protective fuse for fog lights	203 Injector cooling fan	260 Maxifuse box:	
155 Front window ECU	204 Injector cooling fuse	A 30A injection system fuse (60A for Diesel version)	
156 Front window fuse (30A)	205 Glow plug preheating ECU	B 40A ignition protection fuse	
157 Central locking	206 Glow plugs	C 50A fuse for supplementary device system	
158 Central locking fuse (20A)	207 Water temperature sensor for K.S.B.	D 80A fuse for junction unit	
159 Fuel pump deactivation inertia switch	208 K.S.B. electromagnets	261 Option maxifuse box:	
160 Heated driver seat control unit	210 Maximum turbo pressure indicator switch	A 30A fuse, supplementary protection for engine cooling system	
161 Driver seat heat pad	211 Switch for luggage compartment light and anti-theft device	B 60A fuse for ABS	
162A Air conditioner wiring connection	213 Full-load switch for air conditioner		
	214 Thermal switch with compressor for air conditioner		
	215 Heated fuel filter control relay		

Cable colour code:

A	Light blue
B	White
C	Orange
G	Yellow
H	Grey
L	Blue
M	Brown
N	Black
R	Red
S	Pink
V	Green
Z	Violet

Most wires have two colours, shown as, for example, CN, which means Orange and Black.