

## DUCATO 2.0 16V FRONT SIDE DOOR DESCENDING WINDOW GLASS R R 7005D15

Removing ( [Refitting](#) )

- Disconnect the negative battery terminal.

**Op. 7005C53 INTERIOR OPENING HANDLE - R R**

**Op. 7005E22 L/H OR R/H FRONT DOOR PANEL RADIO GRILLE (ONE) - R+R**

**Op. 5570T90 FRONT SPEAKER - R R**

**Op. 7005E38 FRONT SIDE DOOR INTERIOR HANDLE-R R**

**Op. 7005M14 SWITCH UNIT CONTROLLING ELECTRIC WINDOWS REAR VIEW MIRRORS AND DOOR LOCK ON DRIVERS SIDE FRONT DOOR R R**


**Op. 7005E30 OBJECT POUCH ON ONE FRONT SIDE DOOR R R**

**Op. 7005E08 FRONT SIDE DOOR INTERIOR PANEL R R**

**Op. 7005A05 FRONT SIDE DOOR WATER GUARD PROTECTION R R OR ARRANGE**

**Op. 7005D23 FRONT SIDE DOOR DESCENDING WINDOW GLASS GUIDE ONE R R**

**Op. 7005M21 FRONT SIDE DOOR ELECTRICALLY OPERATED WINDOW - R R**

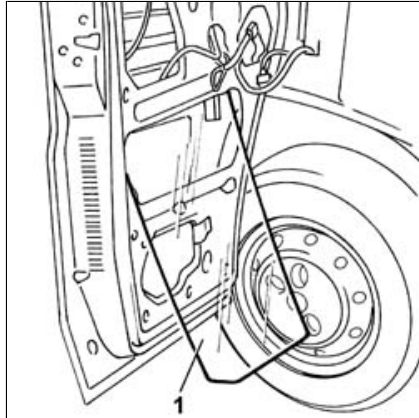

- Completely lower the window.



Take care not to damage the window glass.

- Partly release the window channel and move it aside.

1. Release the window glass from the lower part of the door frame.

Refitting ( [Removing](#) )

- Check the condition of the window glass.

- Insert the window glass in the special housing in the door frame.

- Reposition the window glass channel.

**Op. 7005M21 FRONT SIDE DOOR ELECTRICALLY OPERATED WINDOW - R R**

**Op. 7005D23 FRONT SIDE DOOR DESCENDING WINDOW GLASS GUIDE ONE R R**

**Op. 7005A05 FRONT SIDE DOOR WATER GUARD PROTECTION R R OR ARRANGE**

**Op. 7005E08 FRONT SIDE DOOR INTERIOR PANEL R R**

**Op. 7005E30 OBJECT POUCH ON ONE FRONT SIDE DOOR R R**

**Op. 7005M14 SWITCH UNIT CONTROLLING ELECTRIC WINDOWS REAR VIEW MIRRORS AND DOOR LOCK ON DRIVERS SIDE FRONT DOOR R R**

**Op. 7005E38 FRONT SIDE DOOR INTERIOR HANDLE-R R**

**Op. 5570T90 FRONT SPEAKER - R R**

**Op. 7005E22 L/H OR R/H FRONT DOOR PANEL RADIO GRILLE (ONE) - R+R**

**Op. 7005C53 INTERIOR OPENING HANDLE - R R**

- Connect the negative battery terminal.