


Rear right wiring

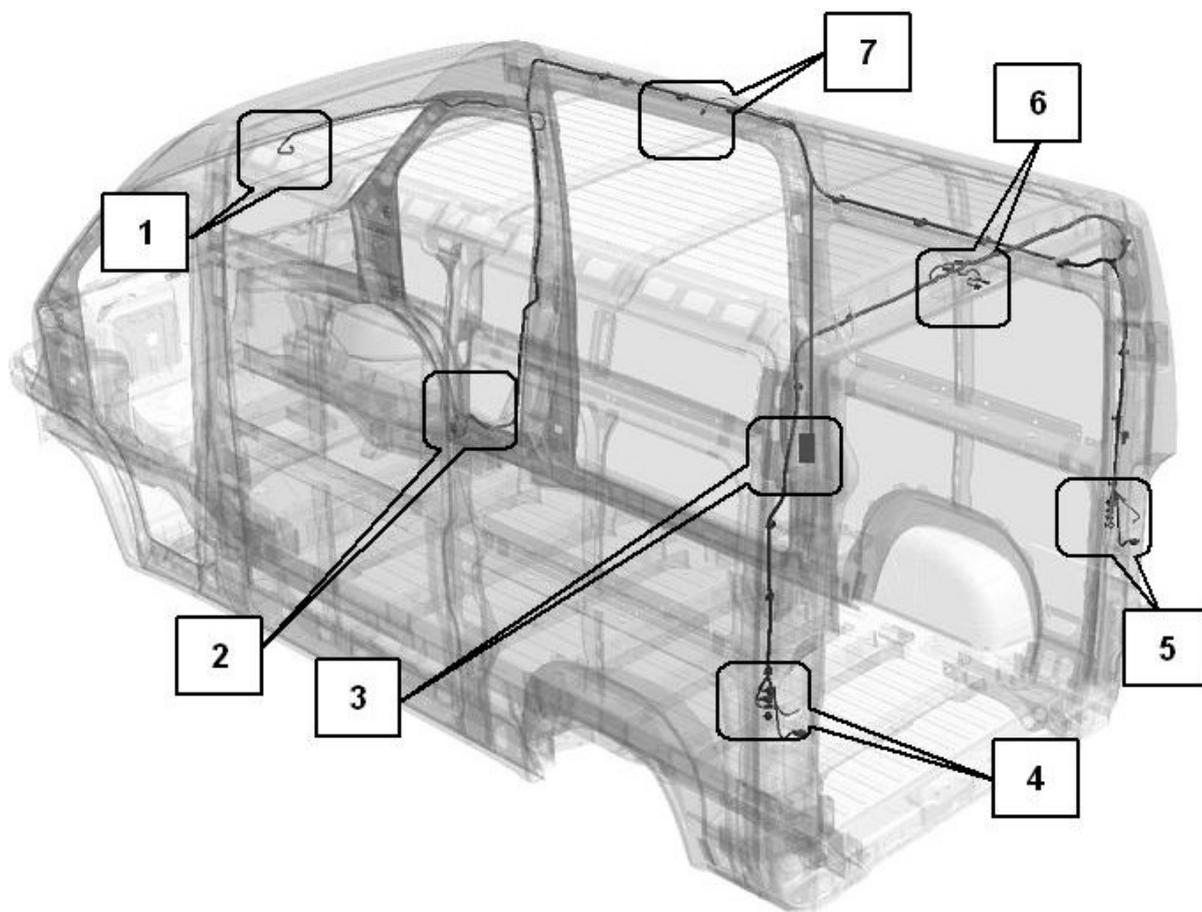

Legend:

- 1 - Connectors for front ceiling light and rear video camera viewer (opt).
- 2 - Rear wiring isolating connectors.
- 3 - Connector for left side sliding door lock.
- 4 - Connectors for rear left light cluster.
- 5 - Connectors for rear right light cluster and prearrangement.....
- 6 - Connectors for rear ceiling light, third brake light and rear video camera (opt).
- 7 - Connector for side ceiling light.




Fuse box on battery and engine compartment control unit

Fuse box on battery

On the vehicle's standard battery there is an interconnecting unit on which there is also a power tap for a supplementary battery.

The connection for the body-makers is the fuse (3) of 50A.

The interconnected cable is comprehensive of the two-way connector located in the compartment at the bottom of the right-hand pillar

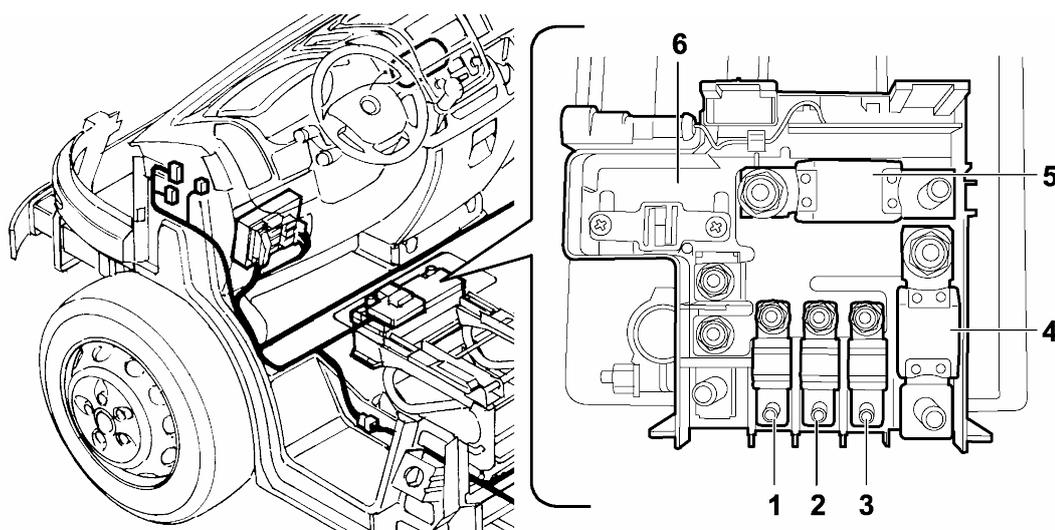

Legend and description of connections:

- 1 - main power supply for fuse control unit and relay under dashboard CPL (80 A)
- 2 - secondary power supply for fuse control unit and relay under dashboard CPL (70 A)
- 3 - power supply for a supplementary battery (50 A) via 2-way connector
- 4 - power supply for fuse control unit and relay in the engine compartment CVM (150 A)
- 5 - power supply for starter motor and alternator
- 6 - interconnecting box on battery.

