




NUOVA BRAVO 1.4 16v R.R. FRONT BUMPER 7210E10

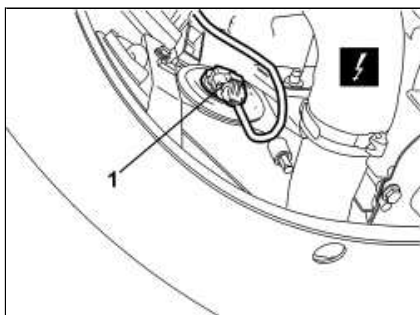


 Removing ([Refitting](#) )


- Position the vehicle on a lift.
- Raise the vehicle.

1. Working on both sides of the bumper, disconnect the electrical connections for the fog lights.

	Description	Connector
1	LEFT FOG LIGHT	See F015 LEFT FOG LAMP
1	RIGHT FOG LIGHT	See F016 RIGHT FOG LAMP

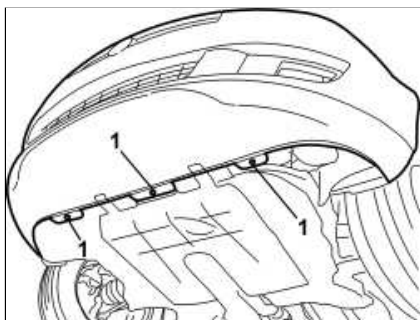


1. Undo the lower bolts fixing the bumper.

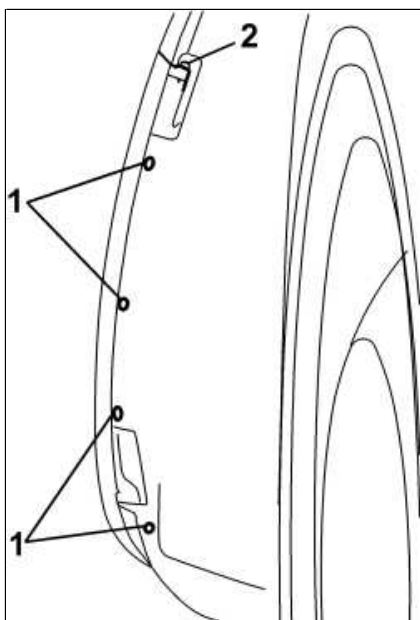


1. Working on both sides of the vehicle, undo the bolts fixing the wheel arch.
2. Undo the bolts fixing the bumper to the wings.

1. Move the front edge (1a) of the left front wheel arch.


2. Disconnect the headlamp washer supply pipe (2b) from the pump (2a).

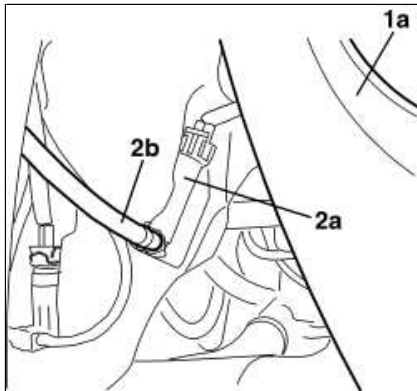

- Lower the vehicle.

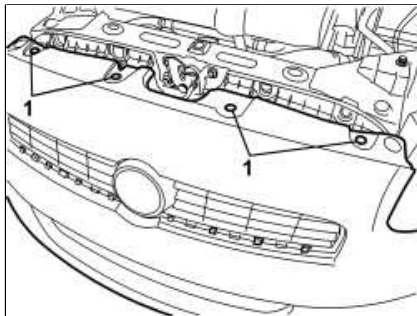

1. Undo the upper bolts fixing the bumper.

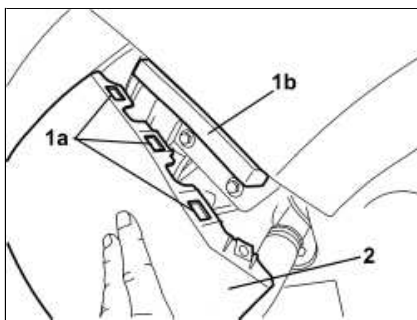



1. Release the side ends (1a) of the bumper from the retainers (1b).

2. Remove the front bumper.

- If necessary, dismantle the bumper.

Op. 7205E10 STRIPPING FRONT BUMPER

 Refitting ([Removing](#) )

- Check that the bumper is not damaged.

Op. 7205E10 STRIPPING FRONT BUMPER

- Position the bumper and fit in its seat, doing up the side retainers.

- Tighten the upper bolts fixing the bumper.

Component	Fastening	dia	Value (daNm)	Validity
front bumper	Bolt	M6	0.6 ÷ 1.0	

- Raise the vehicle.

- Connect the headlamp washer supply pipe to the pump.

- Tighten the bolts fixing the bumper to the wings.

--	--	--	--	--

Component	Fastening	dia	Value (daNm)	Validity
front bumper	Bolt	M6	0.6 ÷ 1.0	

- Tighten the wheel arch retaining bolts.
- Tighten the lower bolts fixing the bumper.

Component	Fastening	dia	Value (daNm)	Validity
front bumper	Bolt	M6	0.6 ÷ 1.0	

- Connect the electrical connection for the fog light.
- Remove the vehicle from the lift.