

FIAT

WIND STOP

PART NUMBER 5911309



BARCETTA

① ISTRUZIONI DI MONTAGGIO


② MONTAGEANLEITUNG

③ FITTING INSTRUCTION

④ INSTRUCTIONS DE MONTAGE

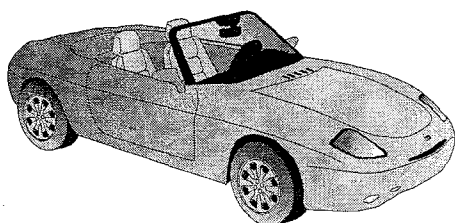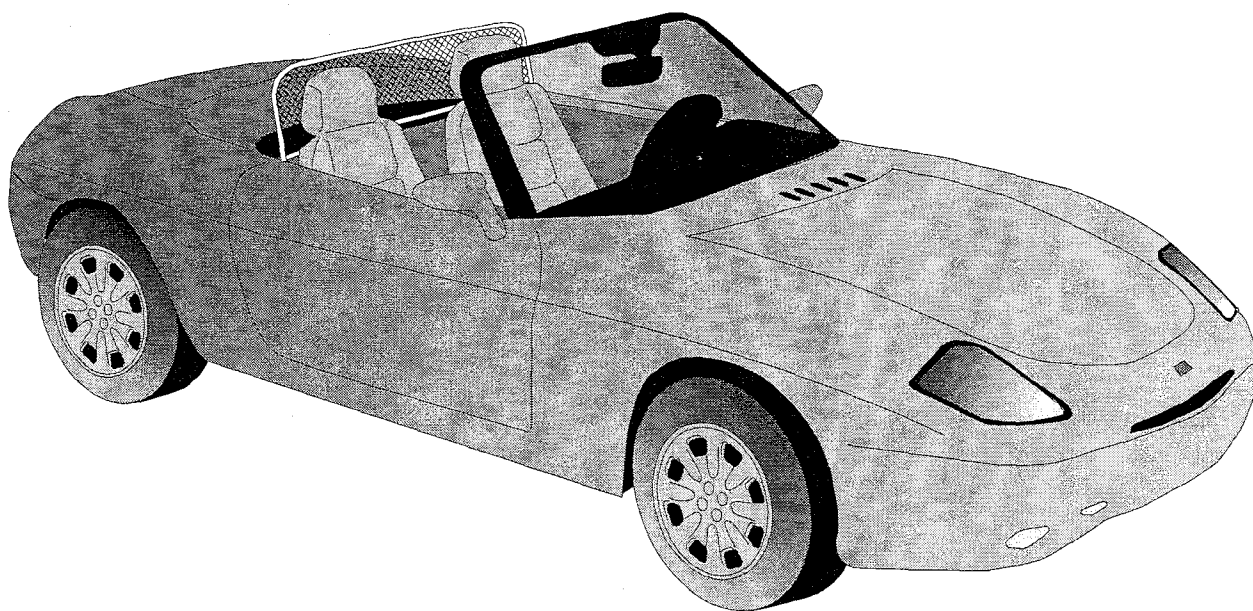

20 MIN.

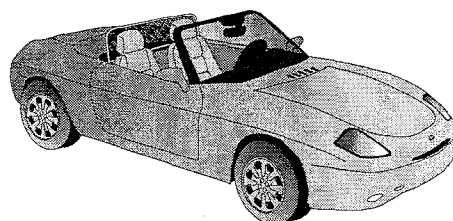

ALL RIGHT RESERVED TO MODIFY THE TEXT

PART NUMBER 5911309


UTENSILI RICHIESTI
REQUIRED TOOLS
BENÖTIGTE WERKZEUGE
OUTILLAGE REQUIS



10 mm SPANNER
CHIAVE ESAGONALE 10mm
SECHSKANTSCHLÜSSEL 10MM
CLEF A CREMAILLÈRE




ø7,5mm DRILL BIT
PUNTA ø7,5mm
BOHRSPITZE ø7,5 MM
MECHE Ø 7,5 MM

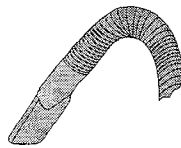


VACUUM CLEANER
ASPIRATORE
STAUBSAUGER
ASPIRATEUR




GRAVER
BULINO
STICHEL
BURIN




ADHESIVE TAPE
NASTRO
KLEBEBAND
RUBAN ADHESIF

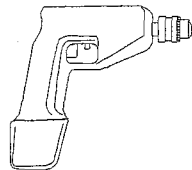


DRILL
TRAPANO
BOHRER
TREPAN

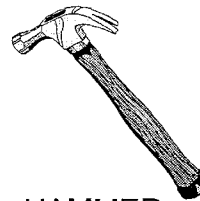

HAMMER
MARTELLLO
HAMMER
MARTEAU

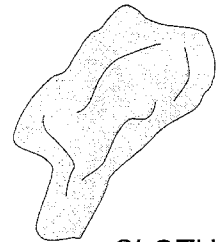

CLOTH
TELO
PLANE
TOILE




(A)



(B)



(D)

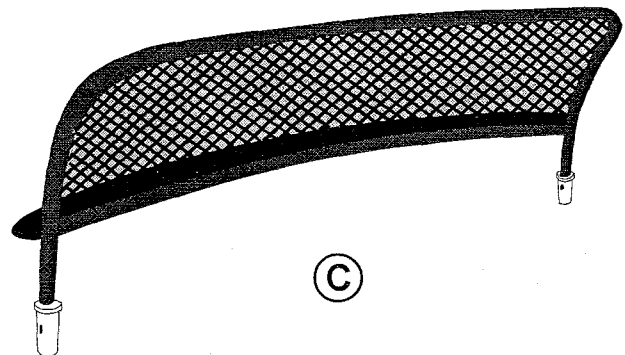


(C)




(E)



(F)

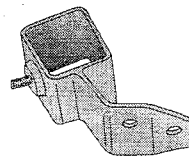

(G)

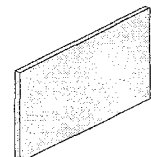

(H)

AVVERTENZE:

VERIFICARE I FISSAGGI DOPO I PRIMI 500Km. FARE QUESTO CONTROLLO PERIODICAMENTE.

CAUTION:




CHECK FASTENING AFTER THE FIRST 300 MILES (500Km) AND PERIODICALLY THEREAFTER.







HINWEIS:

BEFESTIGUNGEN NACH DEN ERSTEN 500 Km (300 MEILEN) UND DANN, PERIODISCH, ÜBERPRÜFEN.




ATTENTION:

VERIFIER LES FIXATIONS APRES LES PREMIERS 500 Km, ET DE FAÇON REGULIERE PAR LA SUITE.

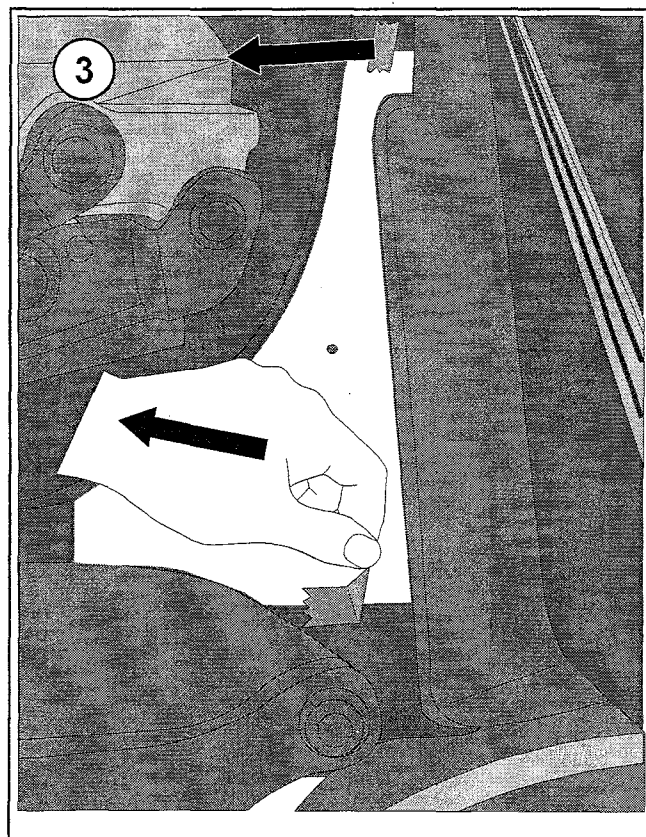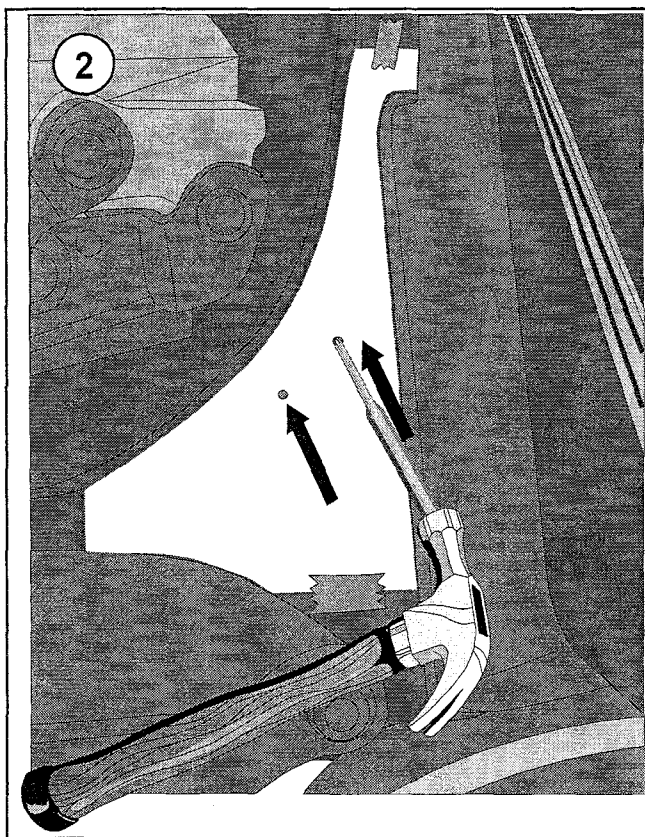
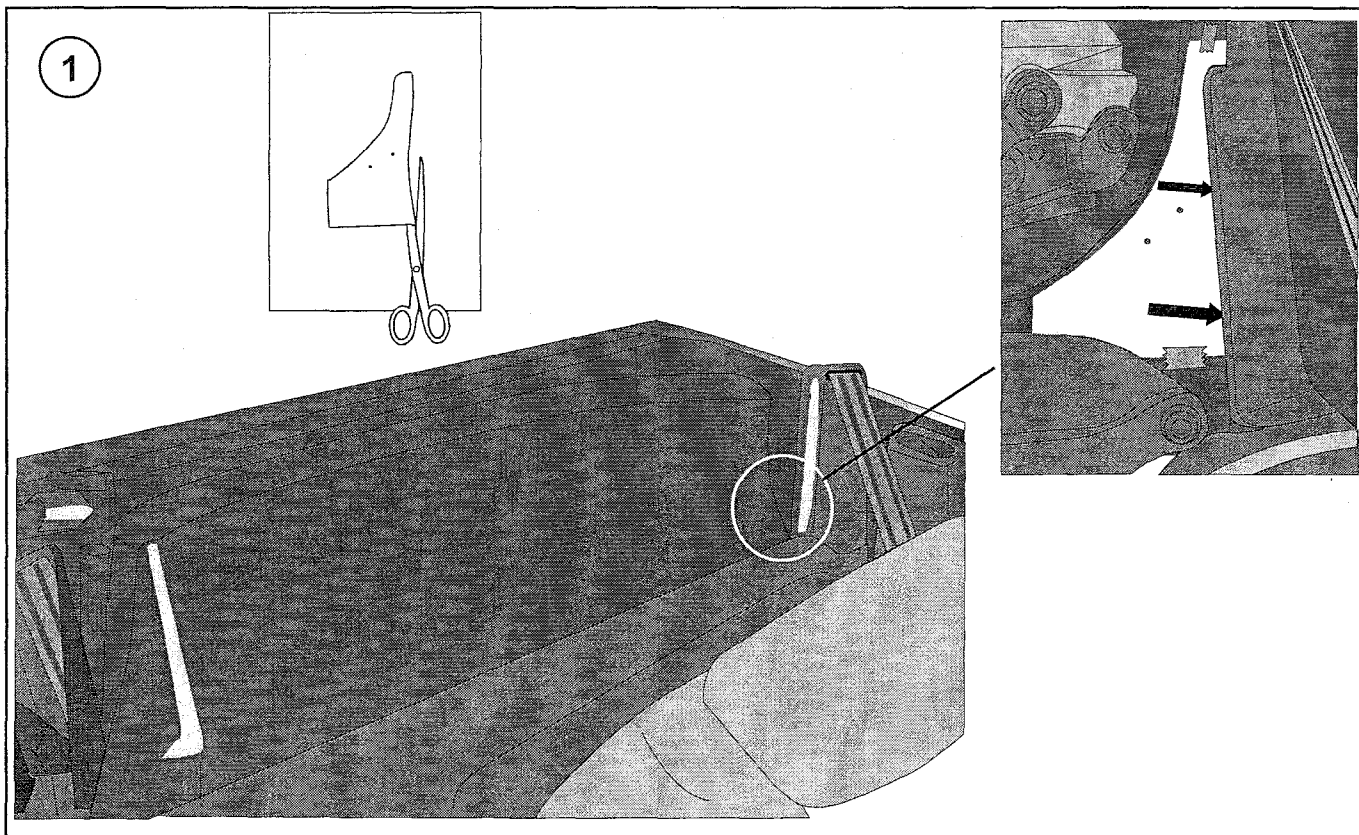


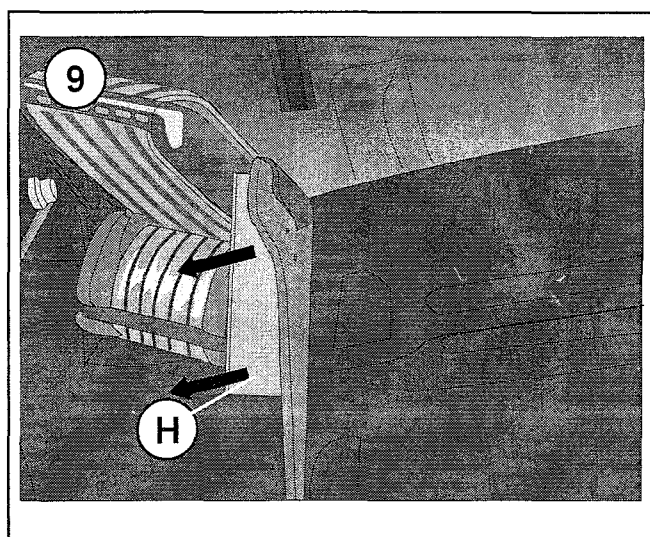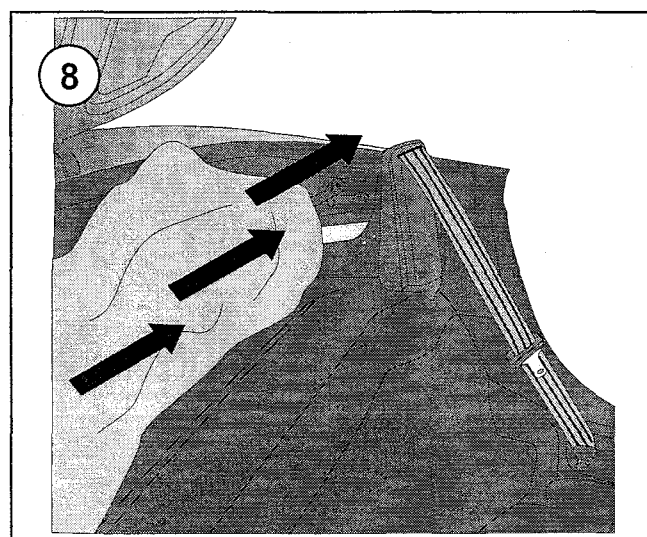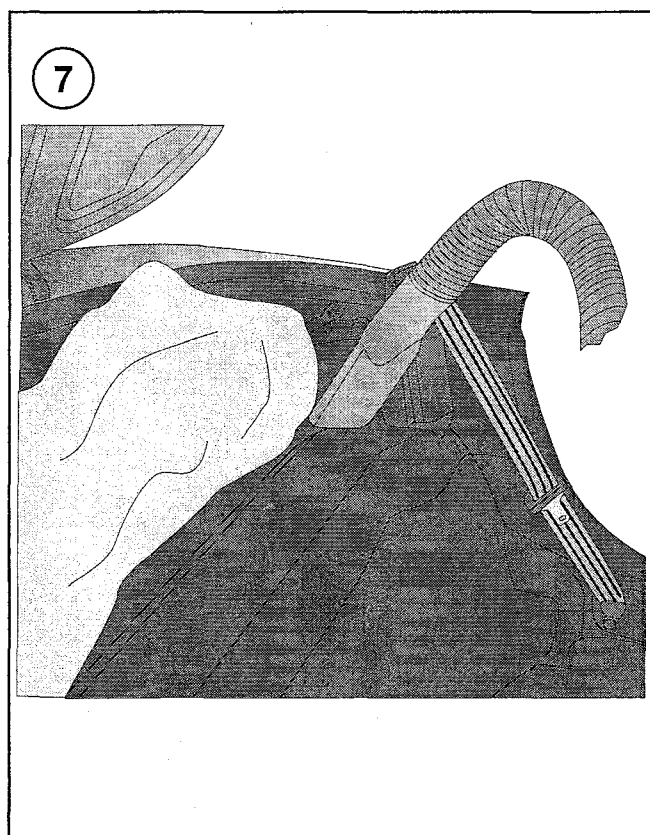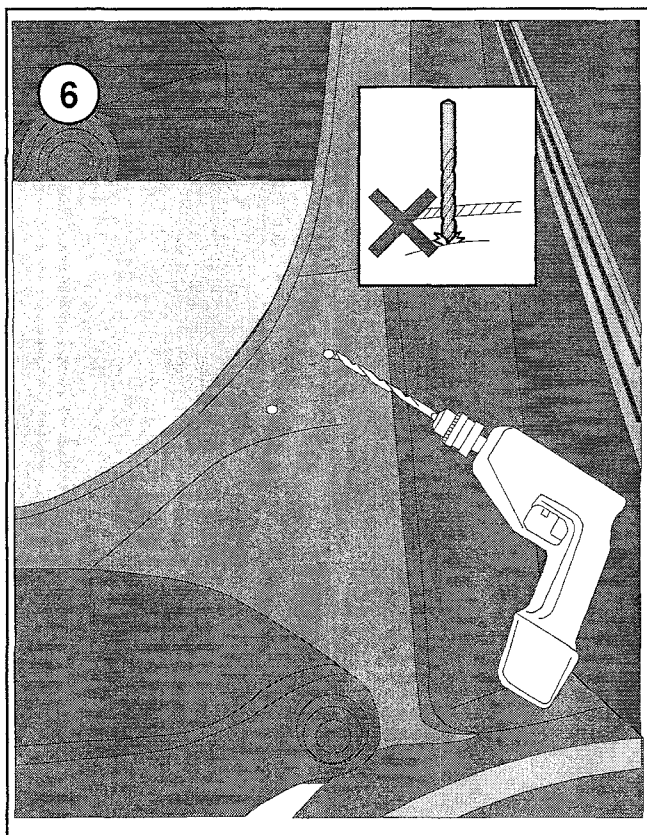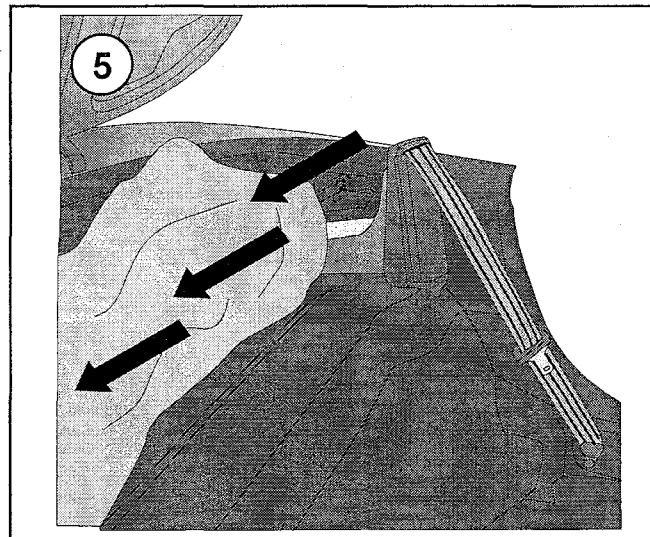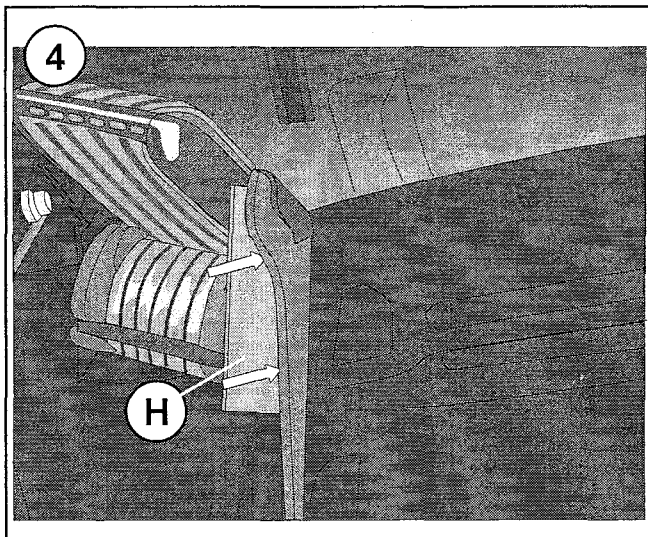


10

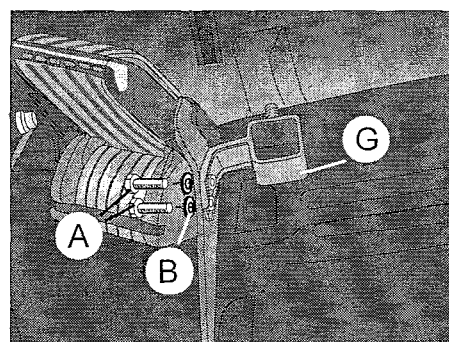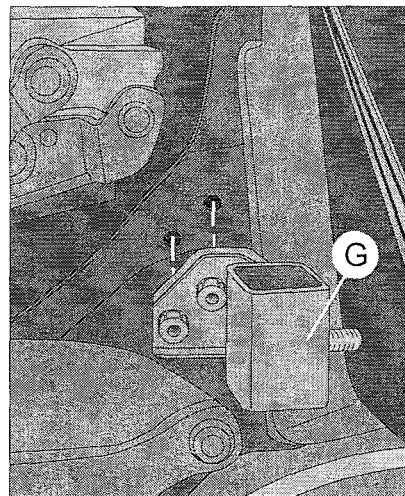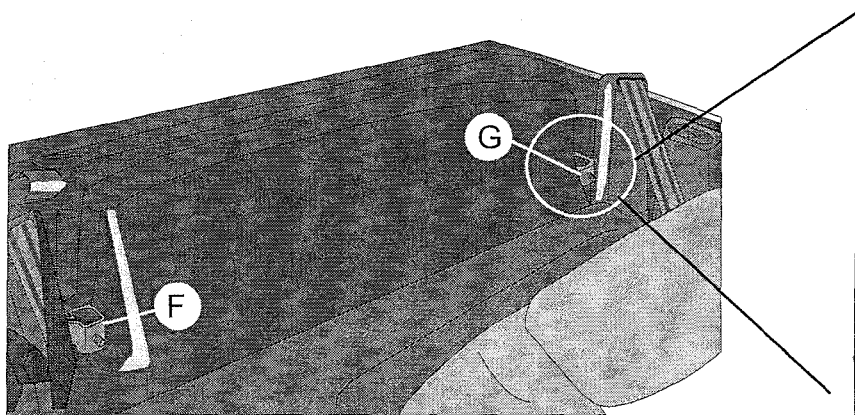

11

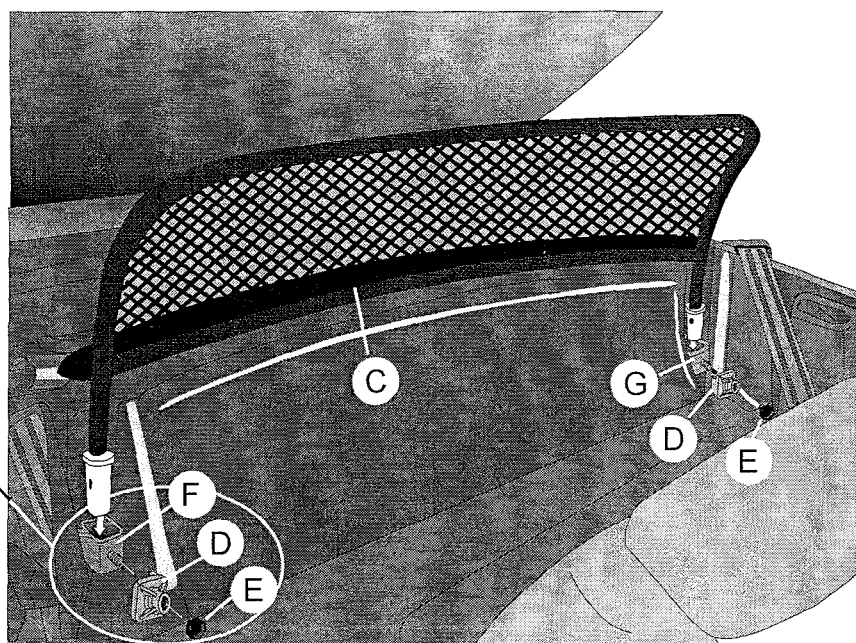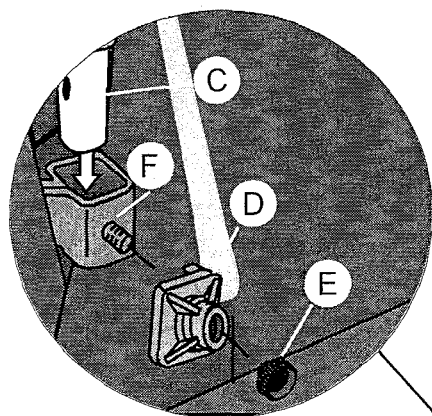

12

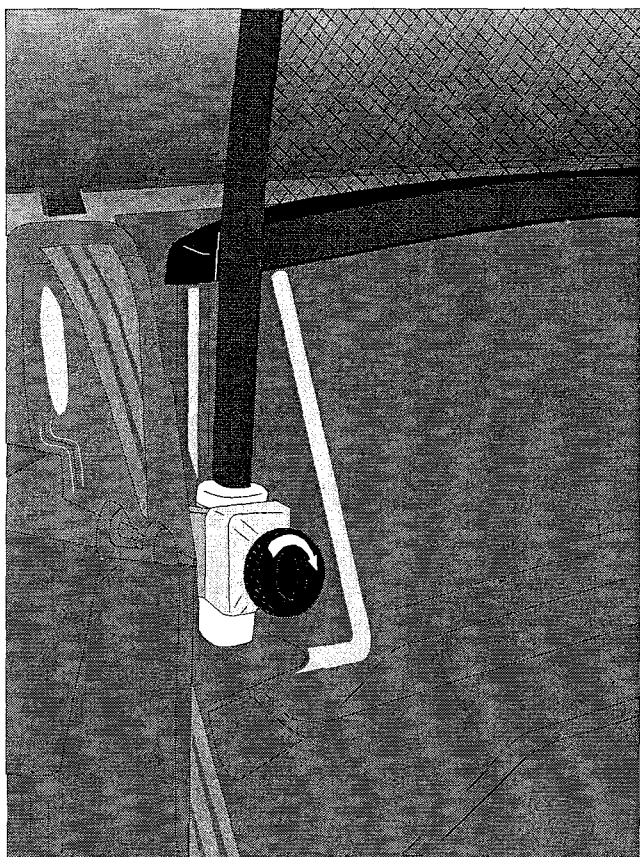

IMPORTANT

-Before installation of the wind-stop, lower the canvas top and let the canvas top store-hood opened.

Mounting Instruction:

NOTE: Should seat belt pillars have the holes, follow the instructions as from figure 10. The installation on LH side is shown; perform the same actions on RH side.

1- Cut the template at the end of the installation manual. Place it on the vehicle by adhesive tape as shown in figure 1.

2- Mark the position of the holes to be drilled.

3- Remove the template.

4- Put the ABS piece (H) between the roller and the seat belt pillar.

5- Cover the canvas top by a cloth, to avoid damages from drilling dust.

6- Drill the seat belt pillar in marked positions by a $\varnothing 7,5$ mm bit.

ATTENTION: Make sure the drill bit does not touch the seat belt roller.

7- Clean the drilling dust by a vacuum cleaner.

8- Remove the cloth from canvas top.

9- Remove ABS piece (H).

10- Install RH (F) and LH (G) side brackets in the just drilled / existing holes and tighten by screws (A), washers (B) and nuts (D).

11- Insert the head parts of the wind-stop (C) in the side RH (F) and LH (G) brackets; make sure the wind-stop cover is rearwards.

Attach covers (D) to the side brackets (F-G); the slide of the covers must be inwards; attach knobs (E) to the welded screws of side brackets (F-G).

12- Tighten knobs (E) and lower the canvas top store-hood.

