



Fuses and Relays inside the car on a 2000 JTD SX


Fuses inside the car are under the oddments tray in front of the driver. There are also some relays and the Fiat CODE immobiliser control unit there, and there are three relays underneath the fuse tray, accessible from the pedal area.

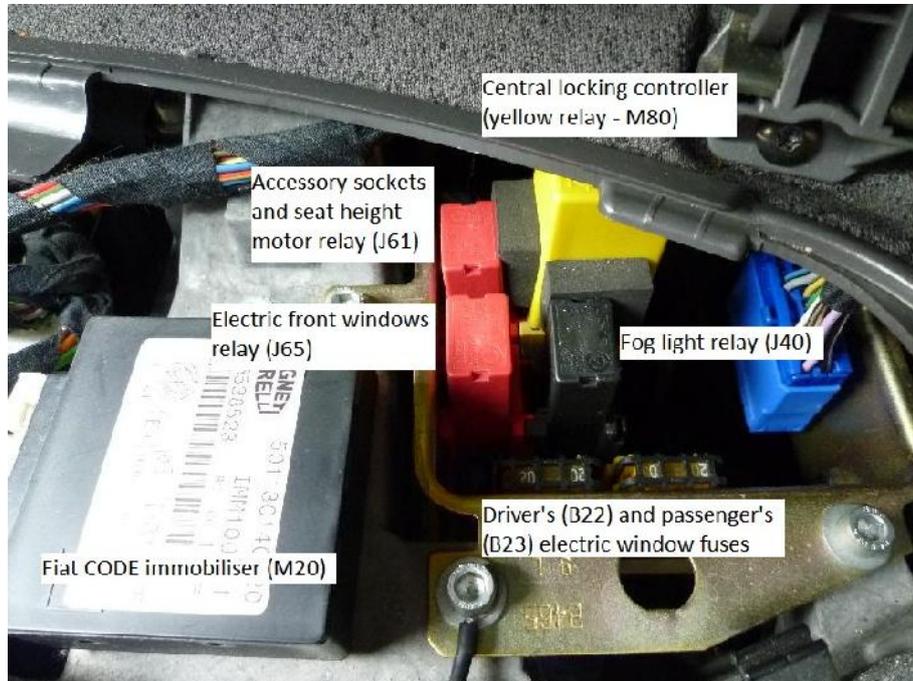

Fog lights are not necessarily fitted to an SX, but the relay is present. The electric window fuses are not shown correctly in the Fiat handbook – this is where they actually are. In brackets are the maintenance CD reference numbers.

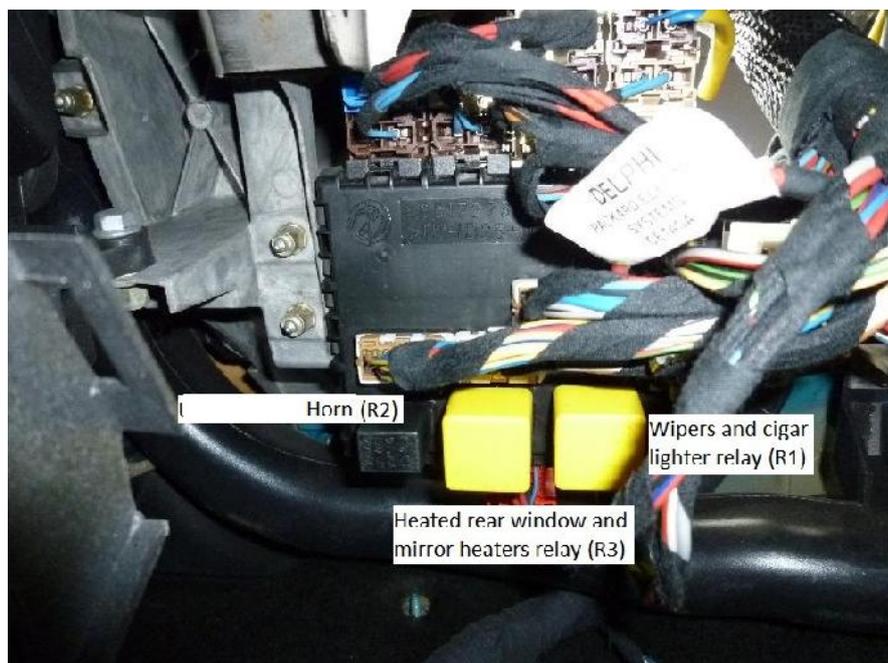

Relays under the fuse tray.

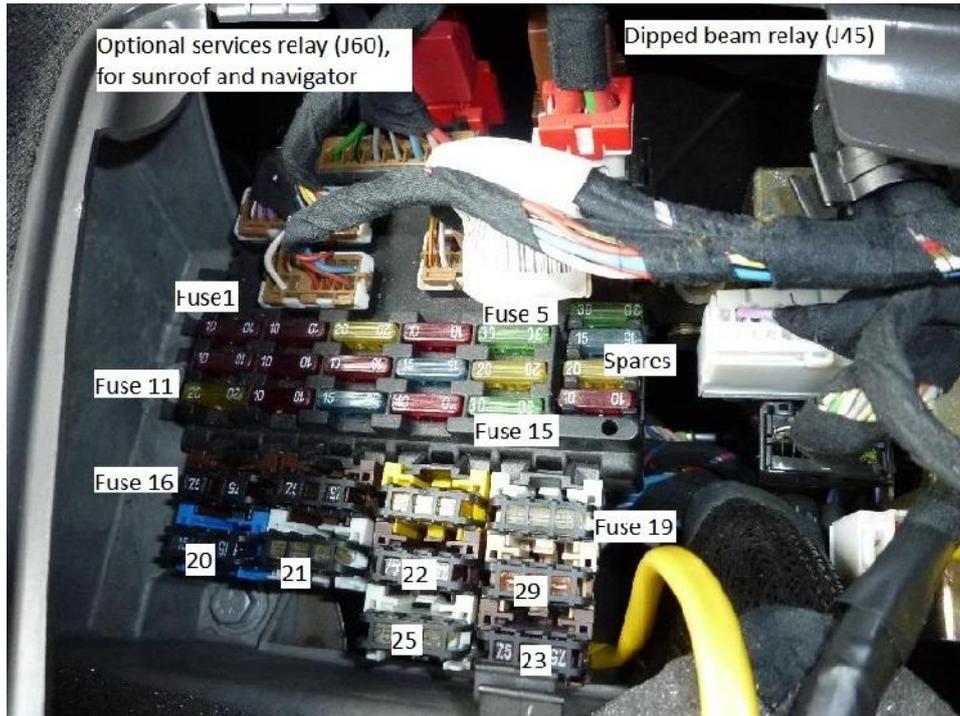

The fuses in the main fuse tray have been numbered as in the handbook. The numbering of them in the maintenance CD is completely different. Note that there are inconsistencies in the maintenance CD diagrams and the accuracy cannot be guaranteed. As far as possible, the following table cross-references them:

| Fuse | Value | Function | Maint CD ref number |
|------|-------|---|---------------------|
| F1 | 10 | RH main beam | F6 |
| F2 | 10 | LH main beam | F7 |
| F3 | 20 | Rear fog light, sunroof relay | F8 |
| F4 | 10 | RH dipped beam | F4 |
| F5 | 30 | Interior fan | F12 |
| F6 | 10 | RH front+LH rear side lights, RH number plate light, ashtray+sound system light | F2 |
| F7 | 10 | LH front+RH rear side light, LH number plate light, heating system light | F3 |
| F8 | 10 | LH dipped beam, brake fluid warning light, headlight beam adjuster | F5 |
| F9 | 15 | Cigar lighter, compressor | F15 |
| F10 | 20 | Wipers, front+rear, windscreen washer pump, headlight washer | F14 |

| | | | |
|-----|-----|---|-----|
| F11 | 20 | Horn | F13 |
| F12 | 10 | Ceiling+boot lights, instrument panel light, sound system, remote receiver, alarm siren | F10 |
| F13 | 15 | Brake lights, indicators, reversing light, sound system, instrument panel power, cell phone, alarm | F1 |
| F14 | 10 | Hazard lights, alarm warning light | F9 |
| F15 | 30 | Heated rear window | F11 |
| F16 | 7.5 | Relays for: wipers+cigar lighter, heated rear window | B26 |
| F17 | 7.5 | Mirror motors, air recirculation flap, relays for: interior fan, seat height, accessory sockets | B27 |
| F18 | 20 | Central locking controller | B19 |
| F19 | 25 | Accessory sockets | B15 |
| F20 | 15 | Front fog light | B13 |
| F21 | 25 | Seat height motor | B21 |
| F22 | 7.5 | Mirror elements | B16 |
| F23 | 7.5 | Airbag | B32 |
| F24 | | | |
| F25 | 25 | Navigator (Fiat Sat-Nav), fridge | |
| F26 | | | |
| F27 | | | |
| F28 | 20 | Driver's window motor | B22 |
| F29 | 20 | Passenger's window motor | B23 |
| | | | |
| | | | |